



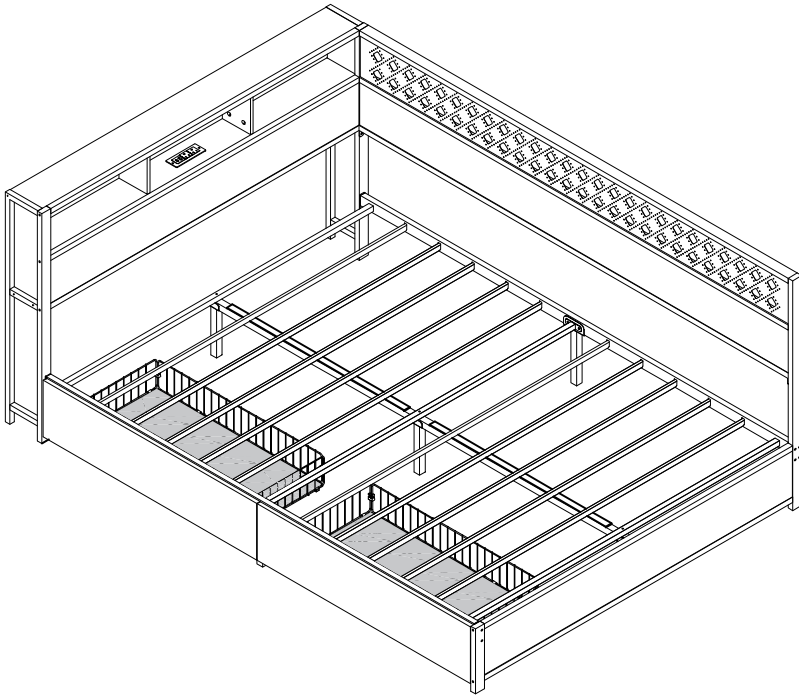

Assembly headboard at left side, please follow the assembly steps on page 6-19.

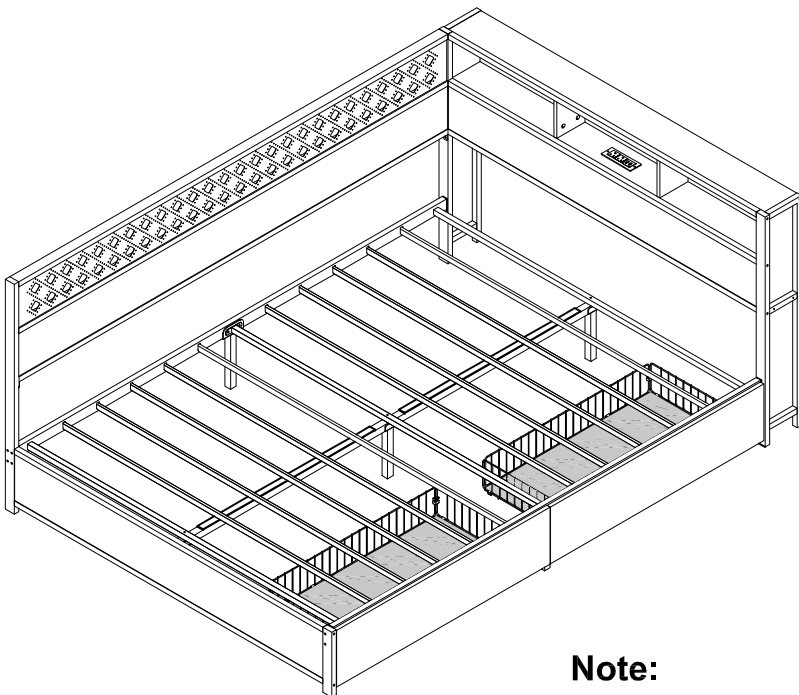

Assembly headboard at right side, please follow the assembly steps on page 20-33.

**Note:**

Should be assembled on flat ground to keep balance.  
It needs at least two people to instal.  
Before starting the assembly, you must read the whole manual and follow the instructions.



2 PERS



DJVN000203\_2

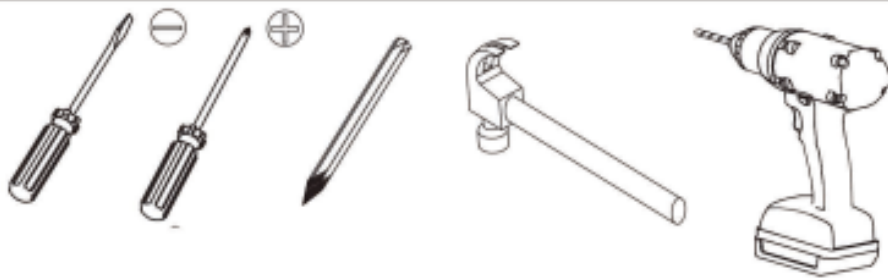


Image Object



# Installation Parts



**A**

x2


M6x8mm



**B**

x30(+2)


M6x10mm



**C**

x4


M6x30mm



**D**

x12(+1)


M6x35mm



**E**

x13(+1)

M6x60mm



**F**

x8

M8x35mm



**G**

x4

M6



**H**

x4

M8



**I**

x16(+1)


Ø5x40mm



**J**

x16(+1)


Ø15x10mm



**K**

x2

Ø4x38mm

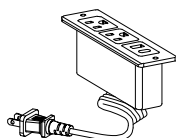

**L**

x1



**M**


x8

Ø3.5x10mm



**N**

x20

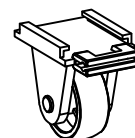

**O**

x8



**P**

x4



**Q**

x2


39x25x6mm



**R**

x1

S4x34x65mm

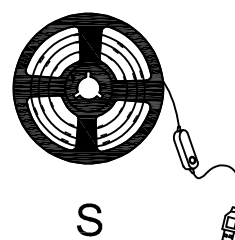


**S**

x1



**T**

x6




**U**


x1

10mm/12mm

# Installation Full Bed




1  
x1




2  
x1




3  
x1




4  
x1




5  
x1




6  
x1

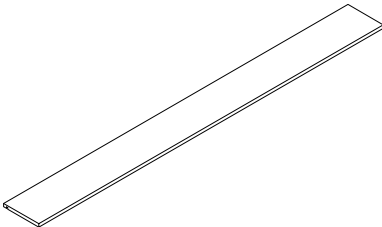


7  
x1

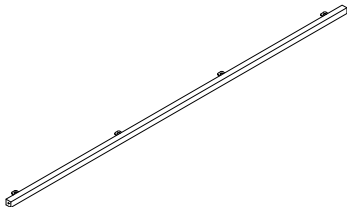


8  
x1

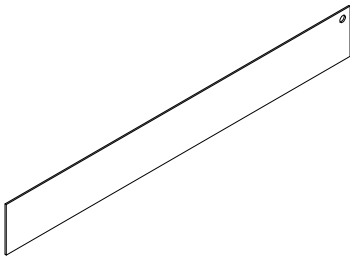

9  
x1

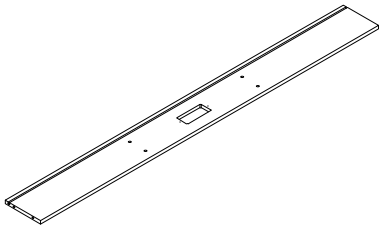

10  
x1

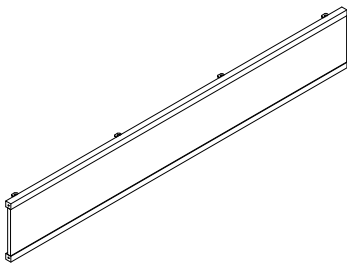


11  
x1




12  
x1




13  
x1

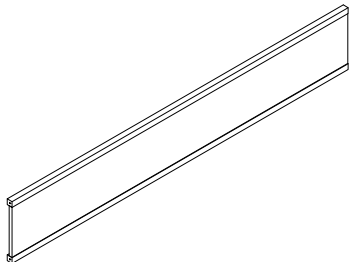

14  
x1

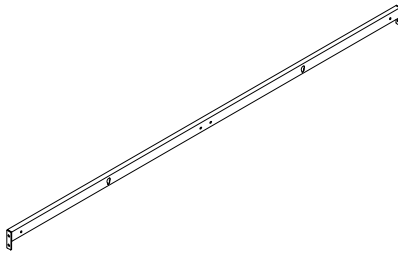




15  
x1





16  
x2

# Installation Full Bed


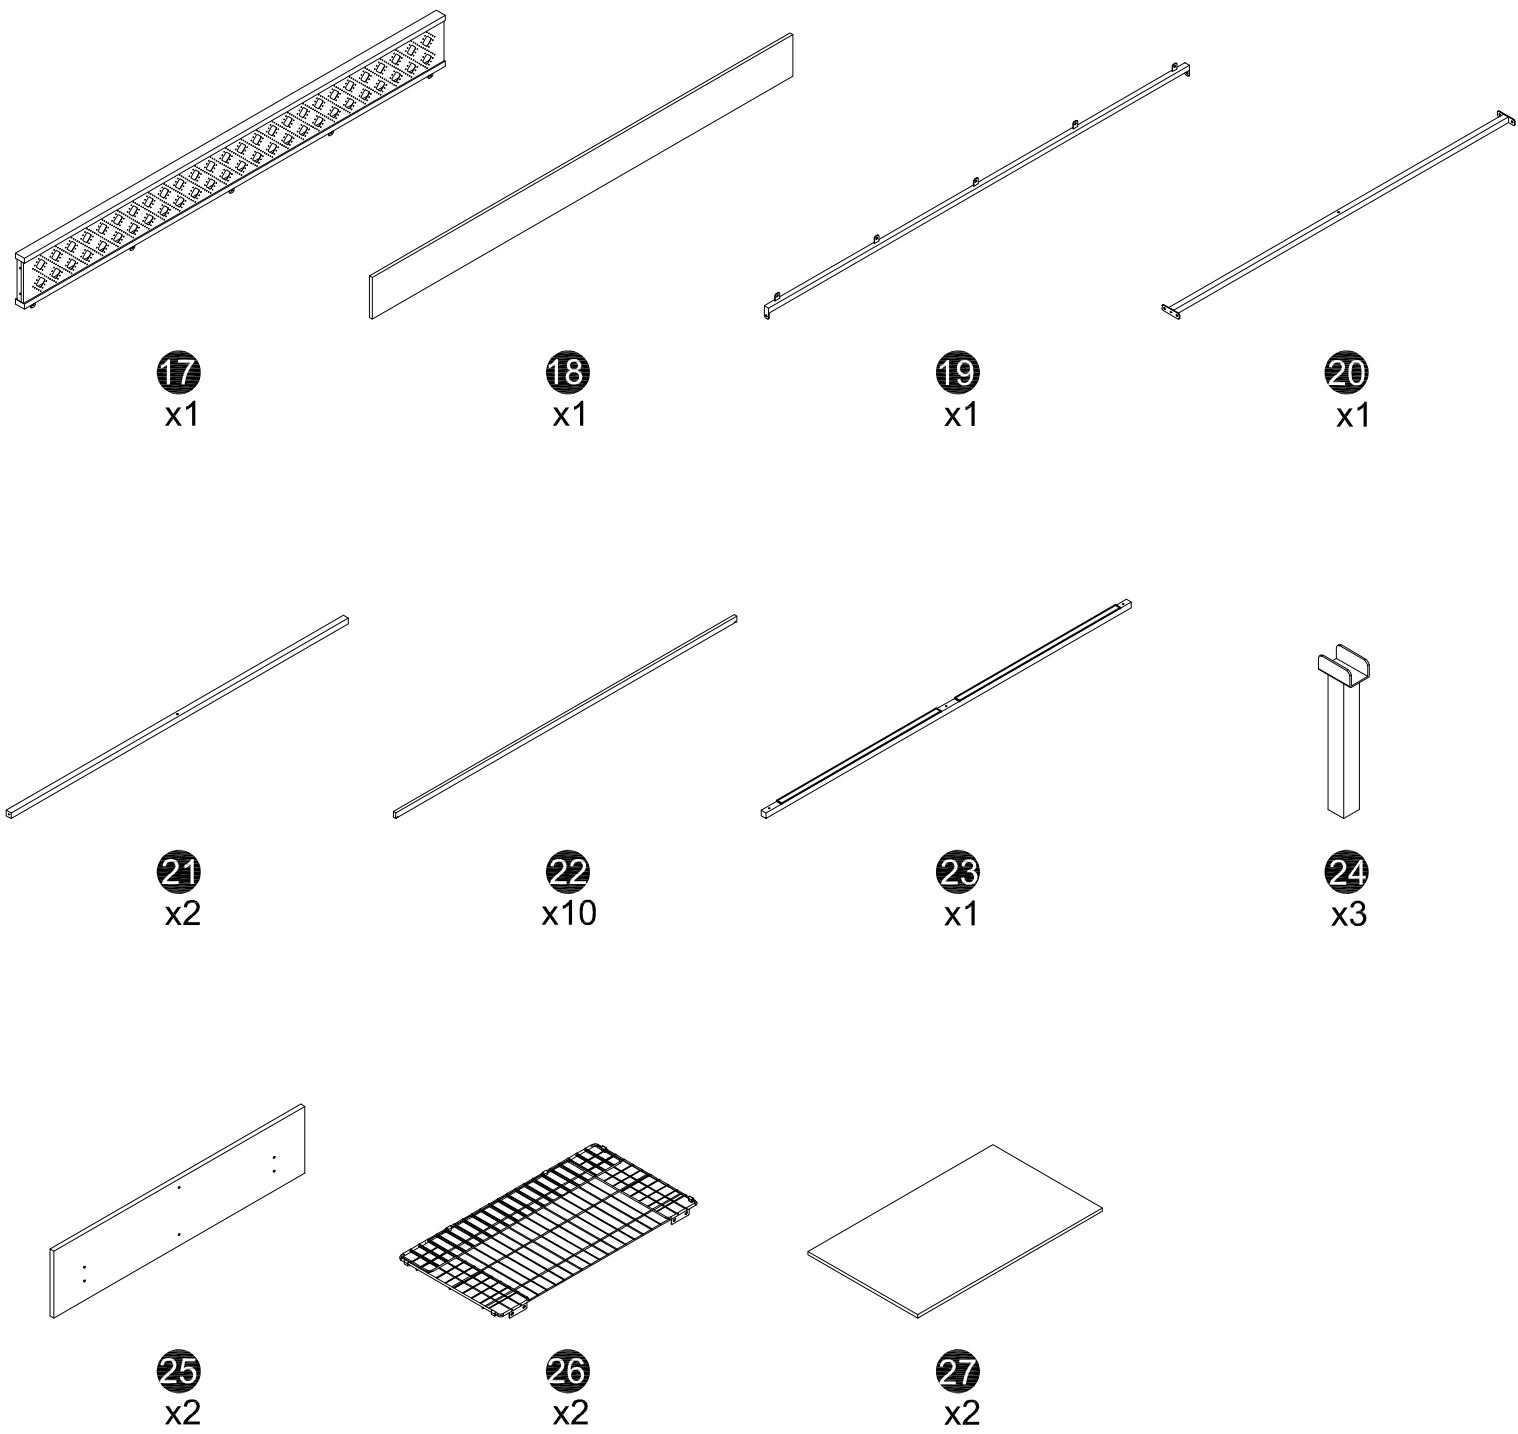


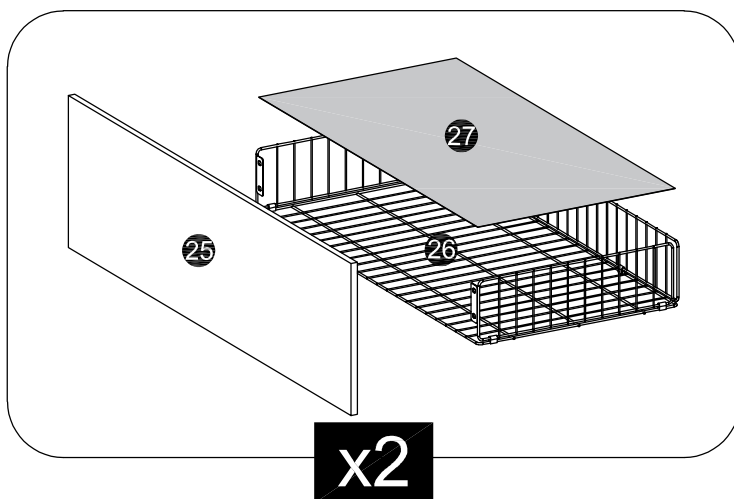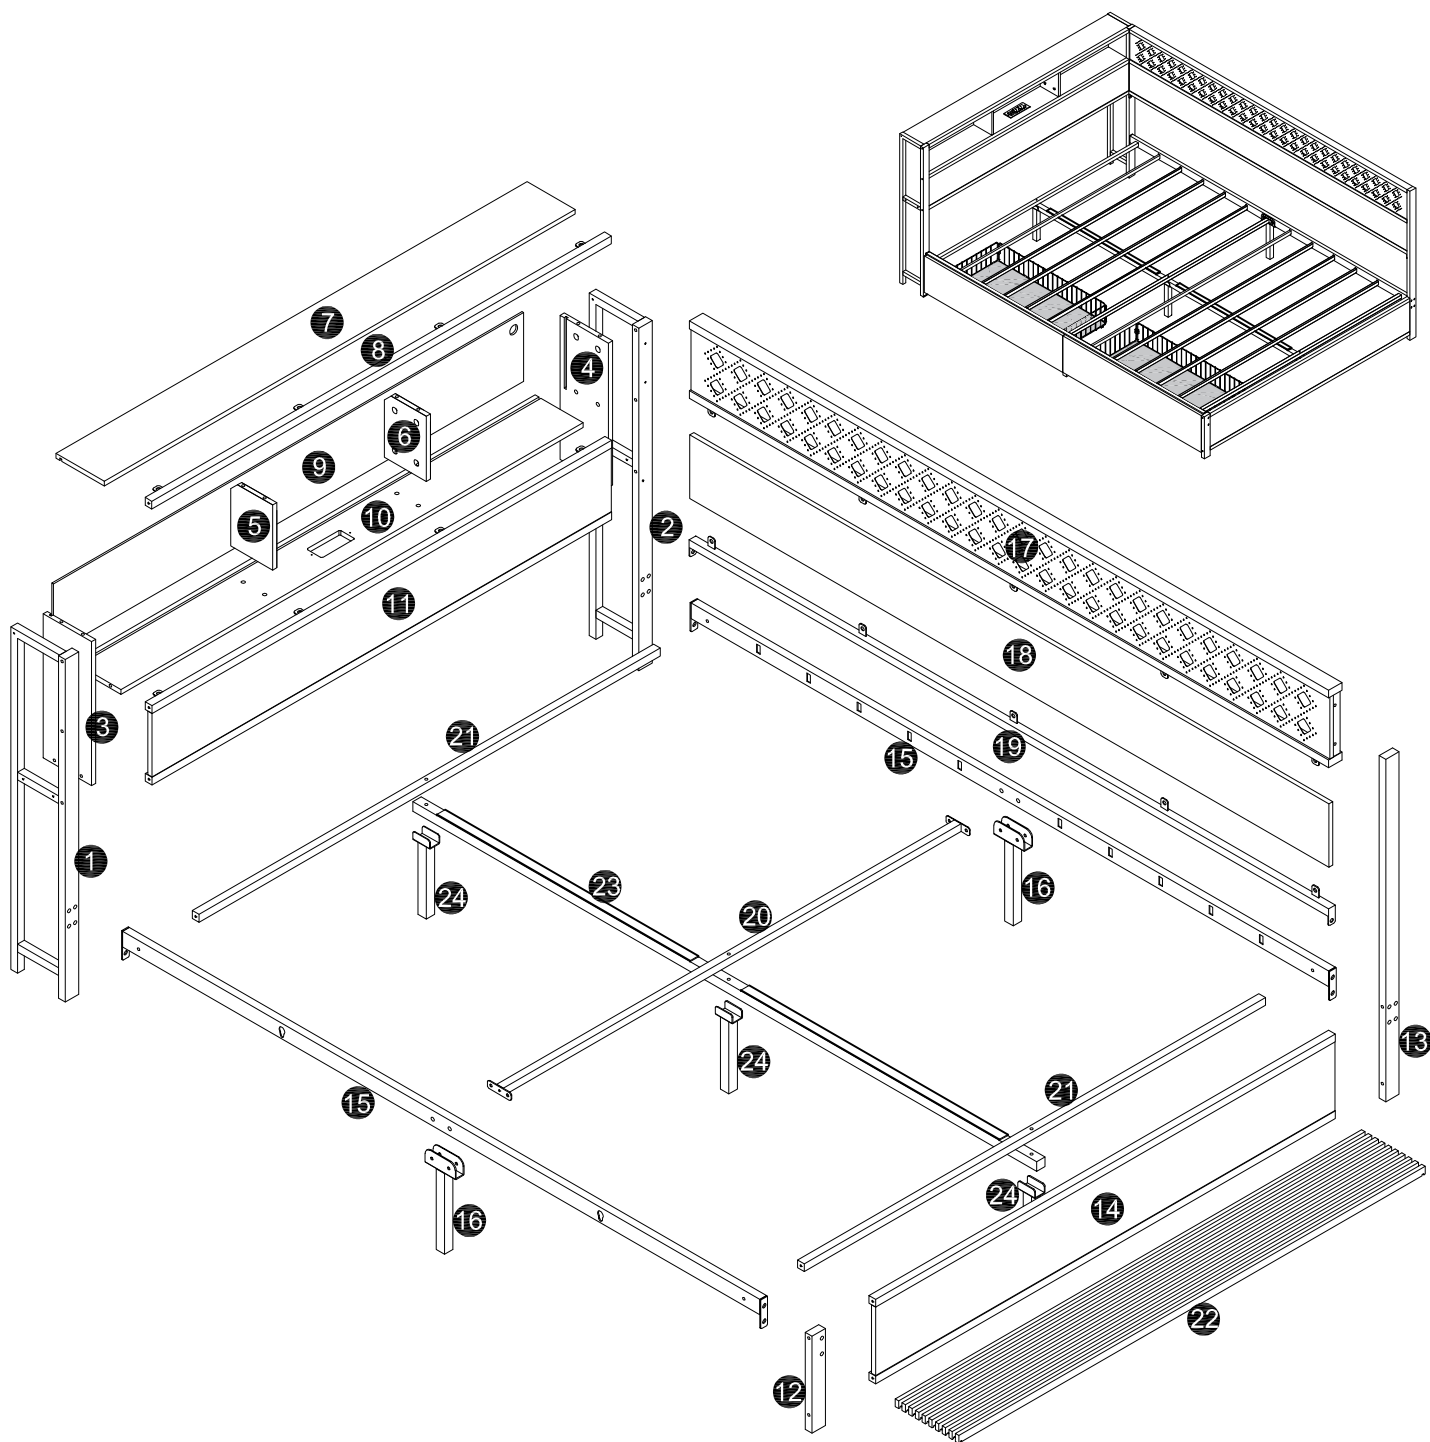

1

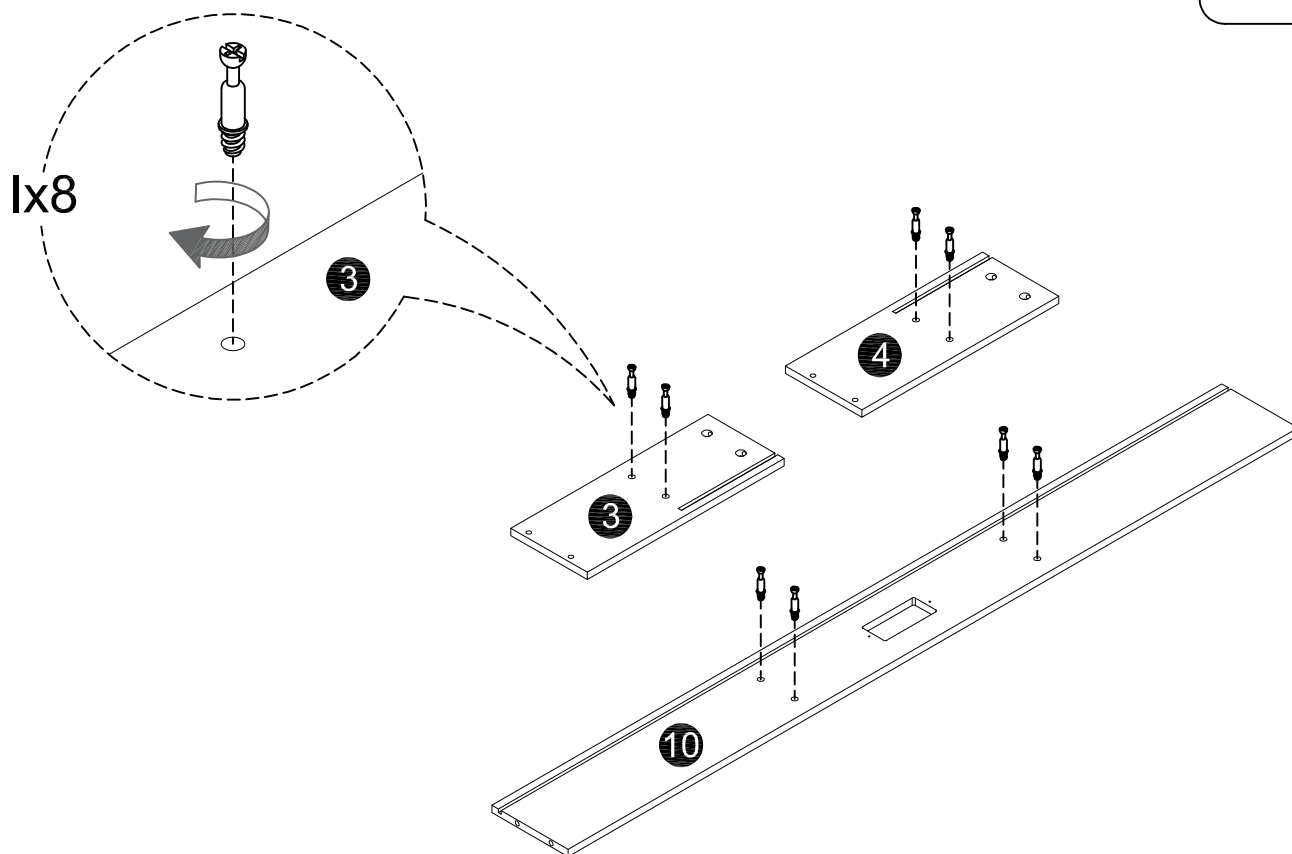

2

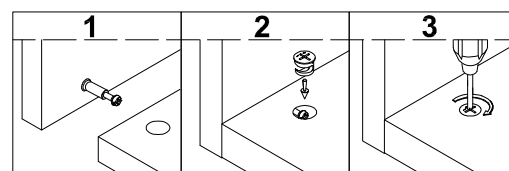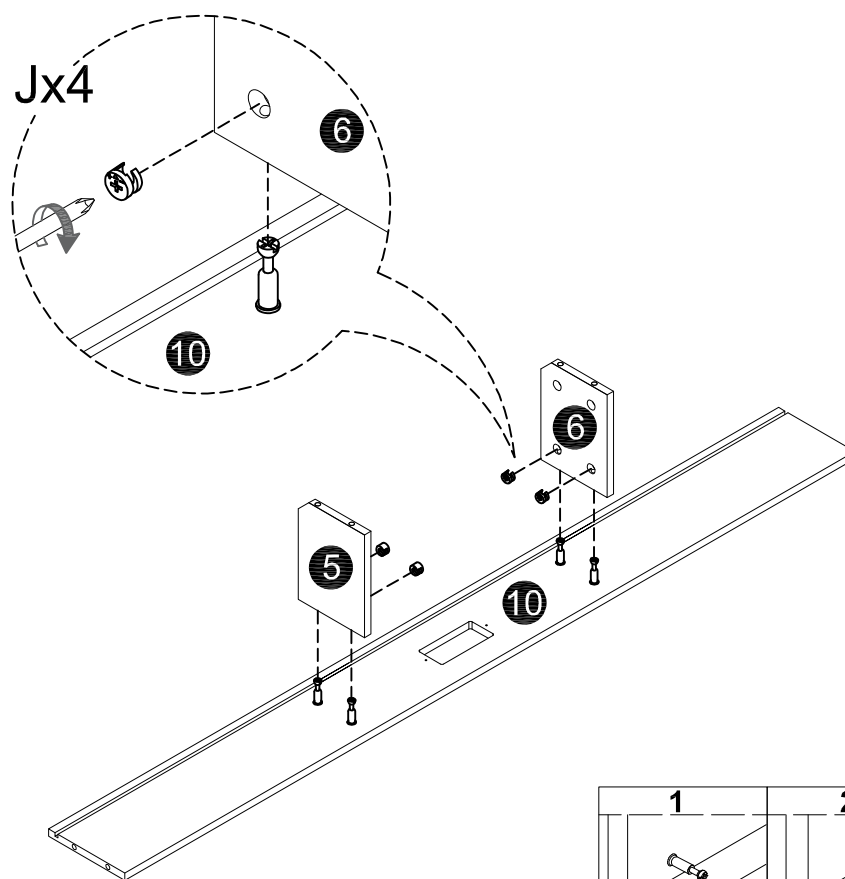


3


J



x4

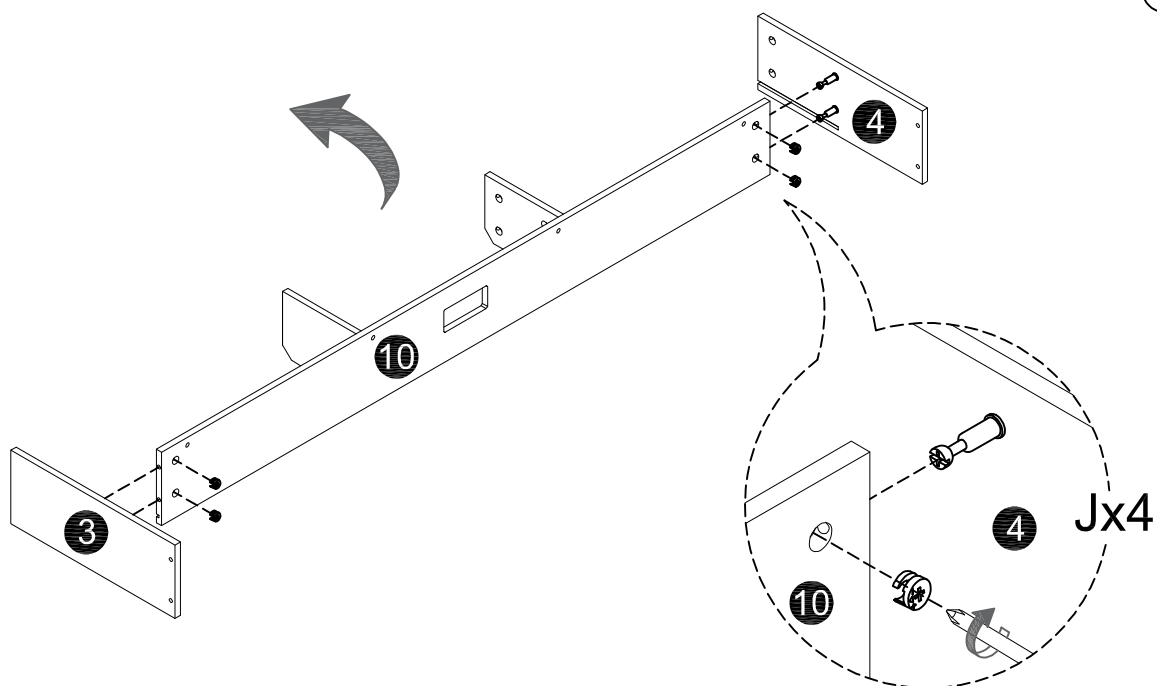

4

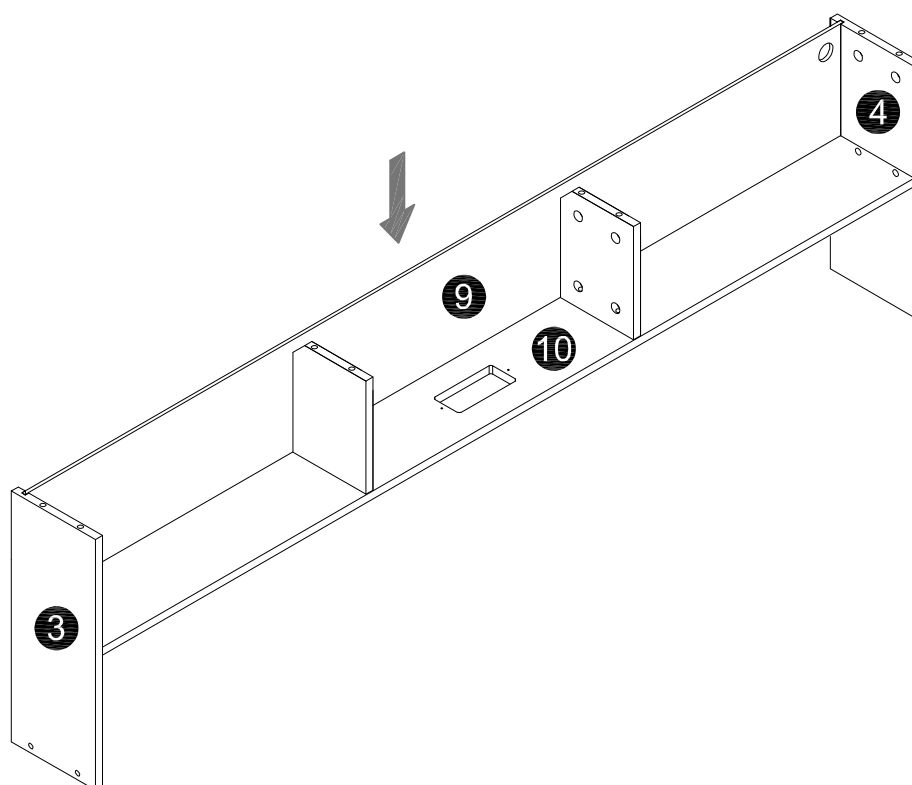

5

M



x6

S




x1

T



x6

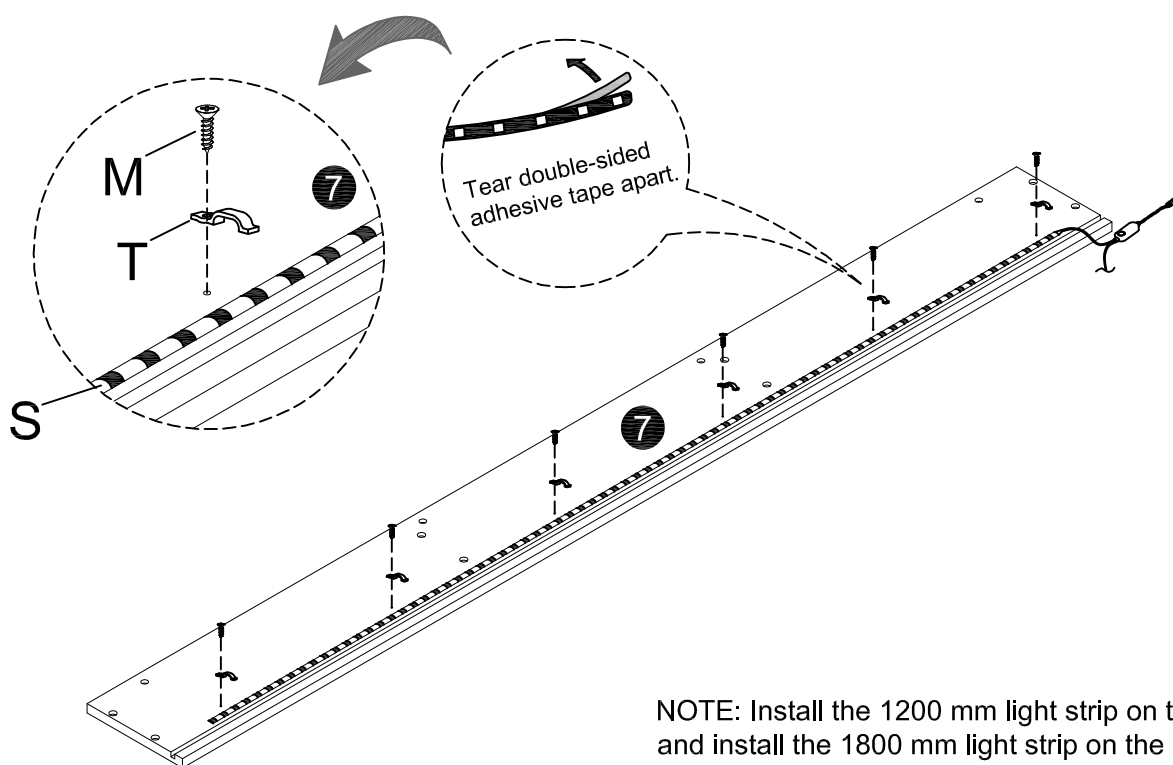

NOTE: Install the 1200 mm light strip on the front panel, and install the 1800 mm light strip on the metal mesh side.


6

B






x4



I








x8

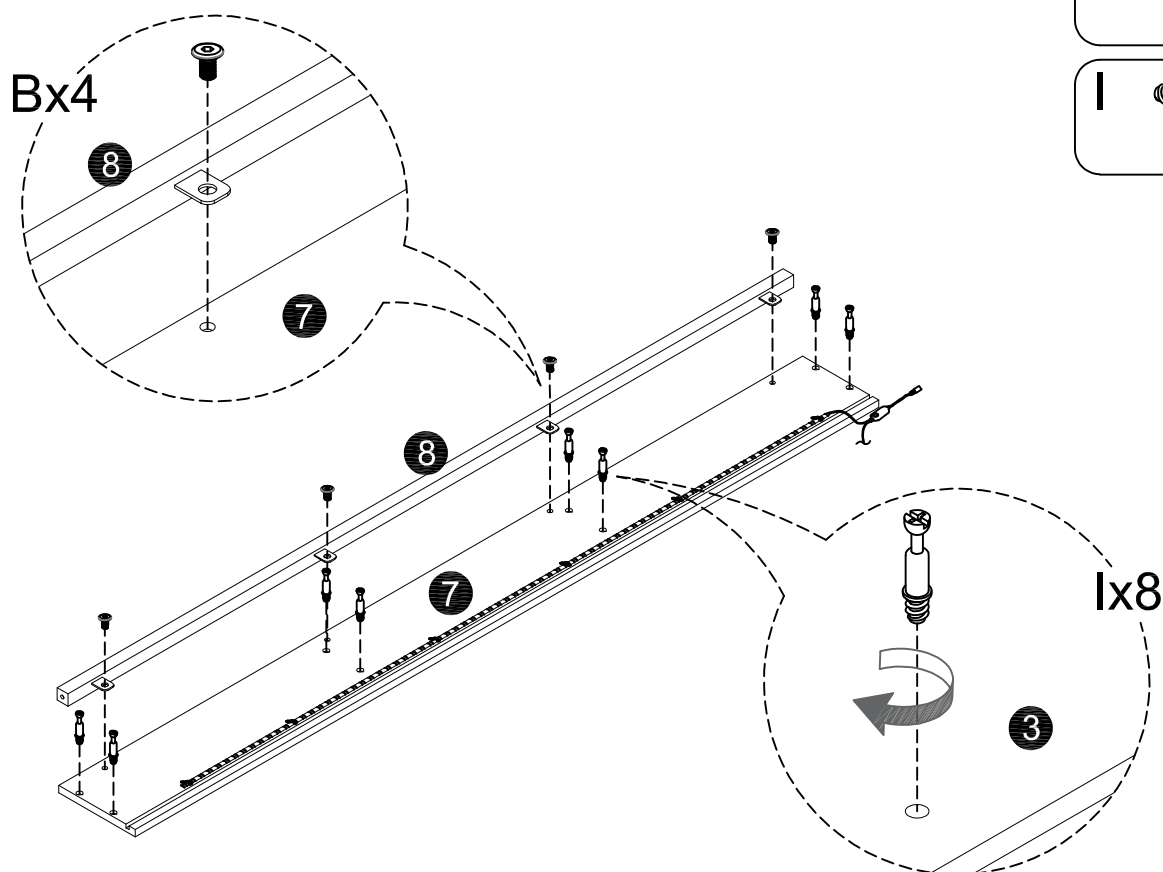

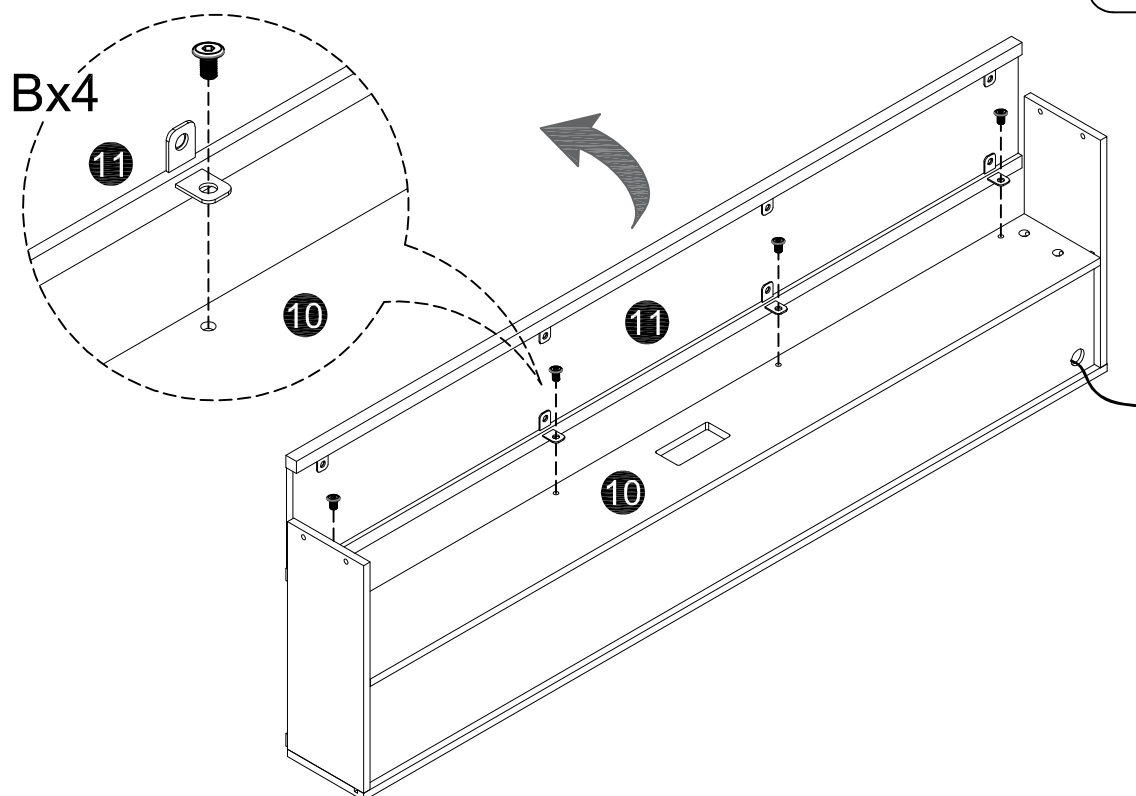
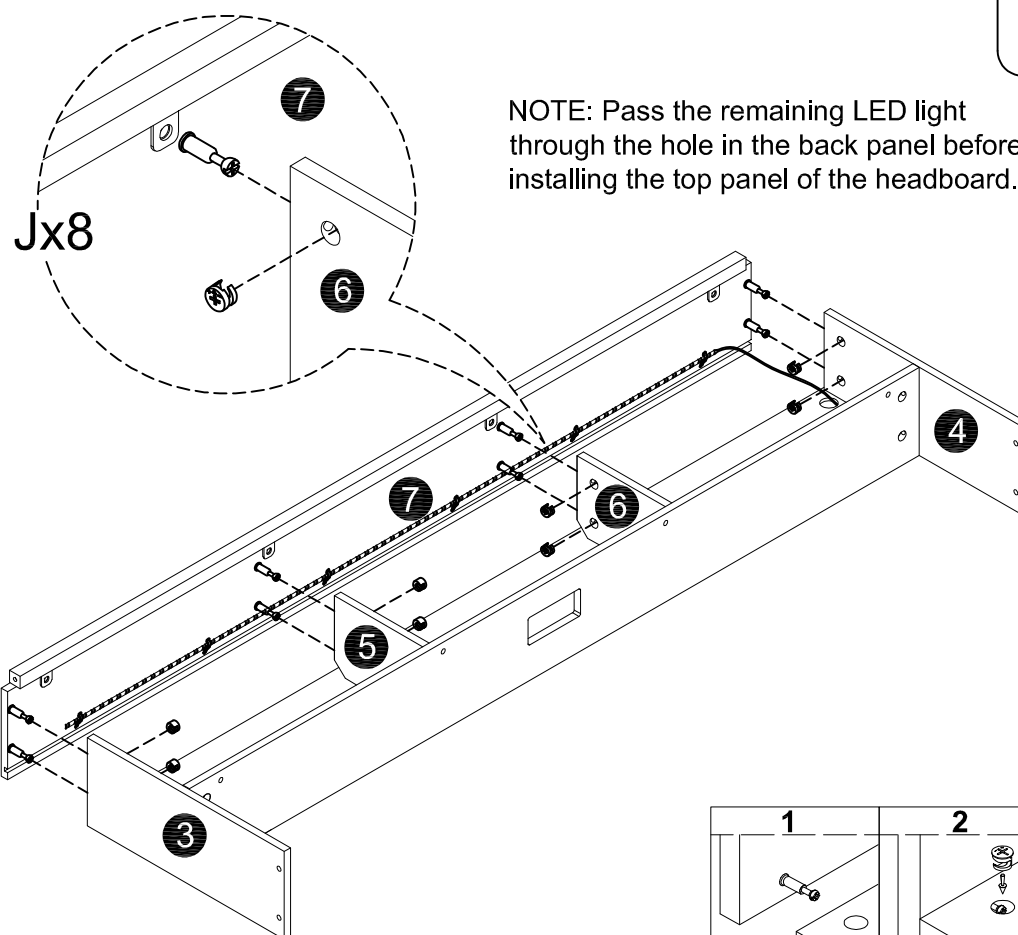







NOTE: Do not tighten bolts  
Just tighten it to about 80%  
and you're done.

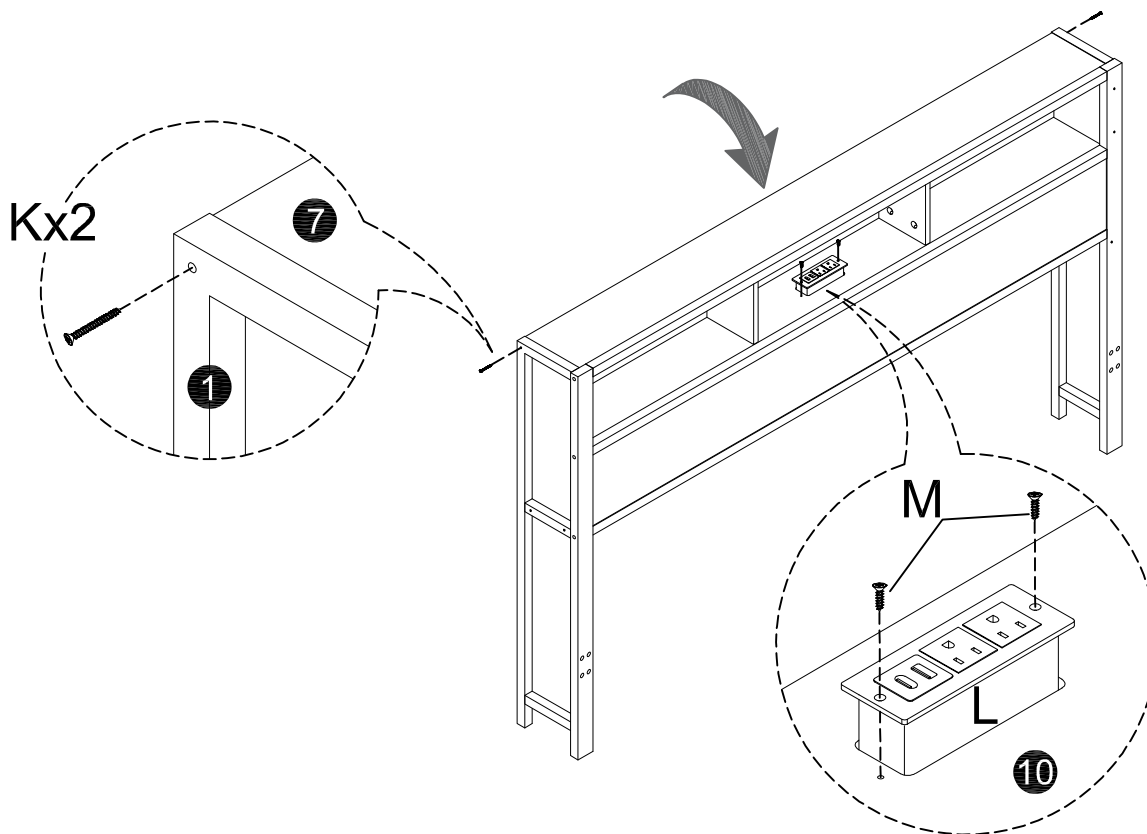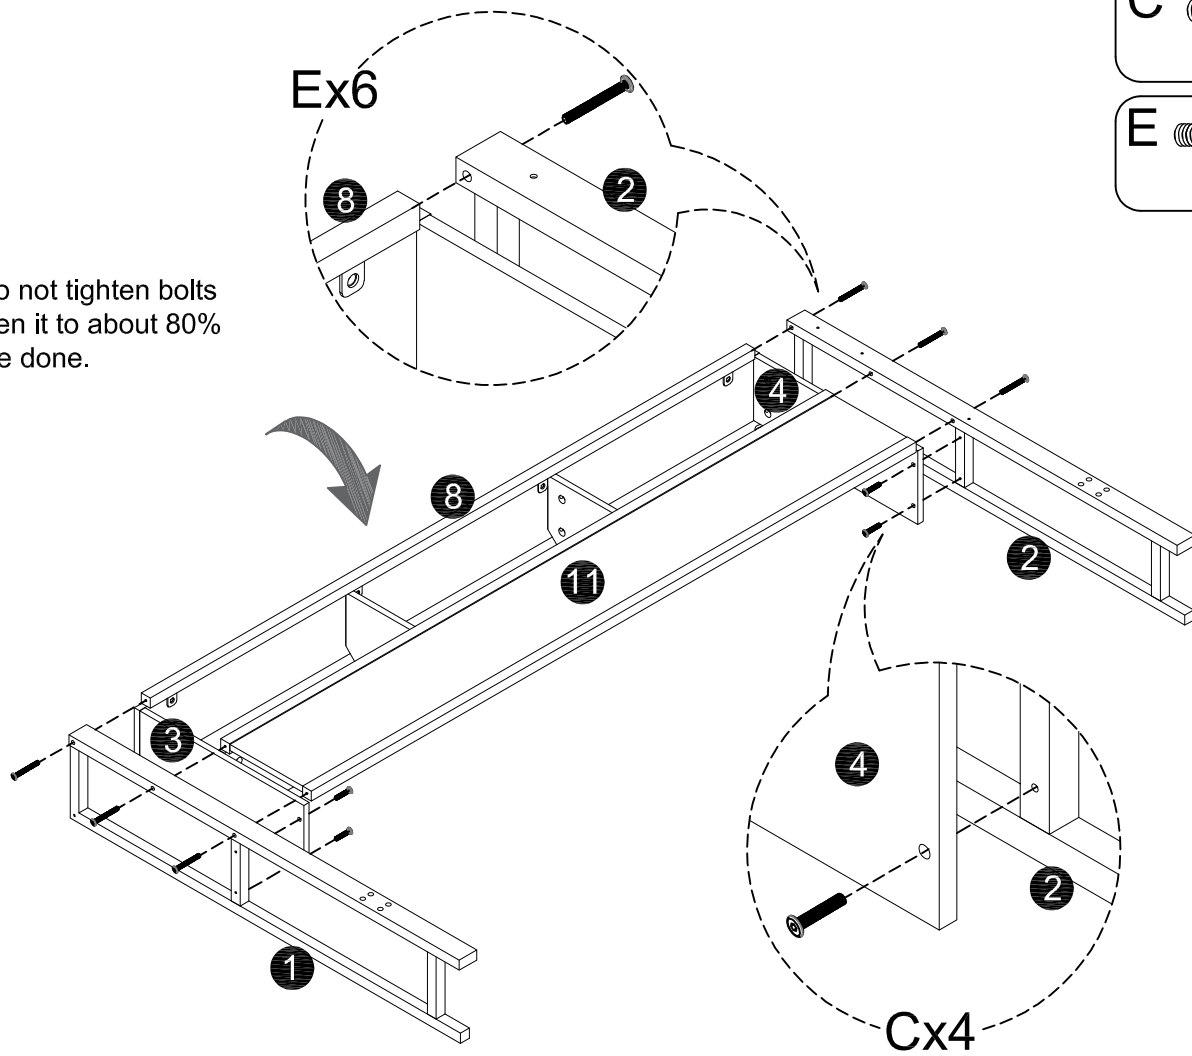

11

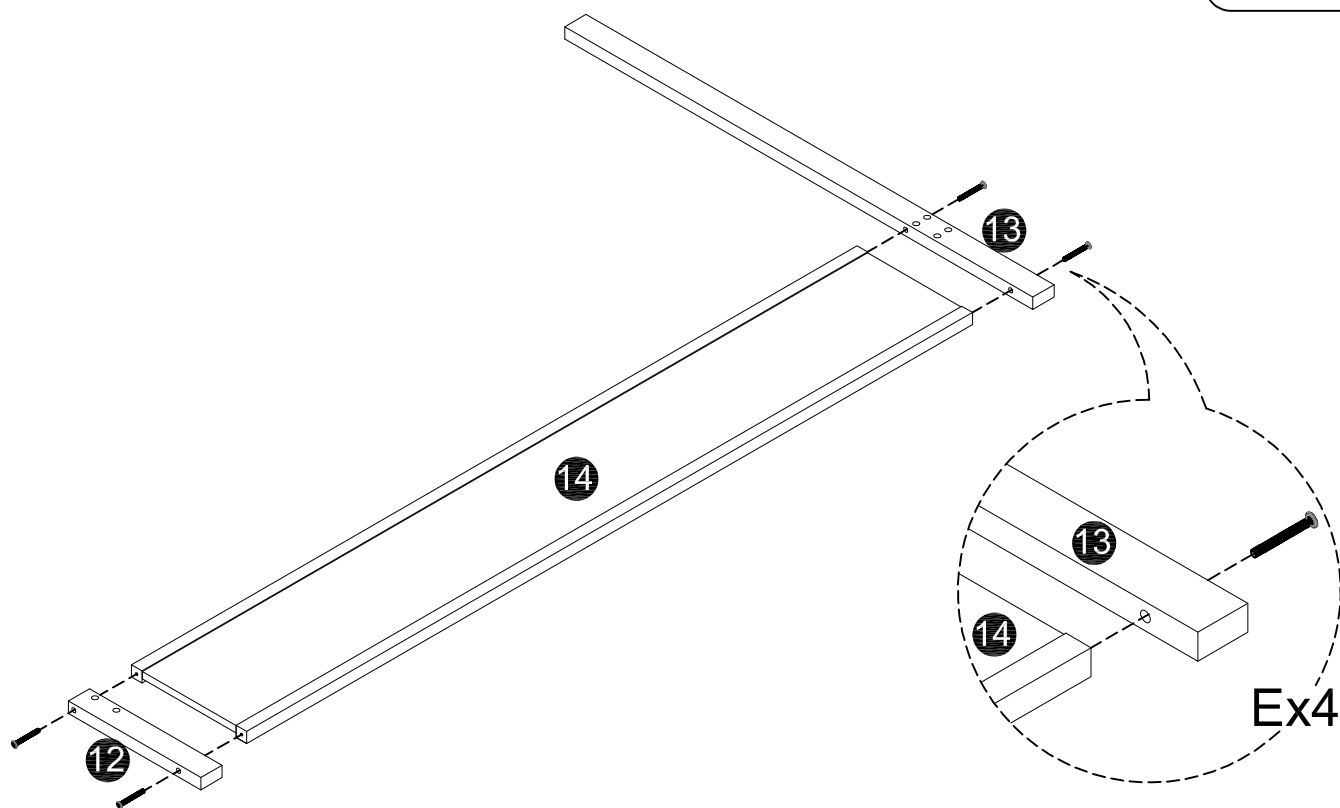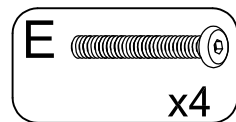

12

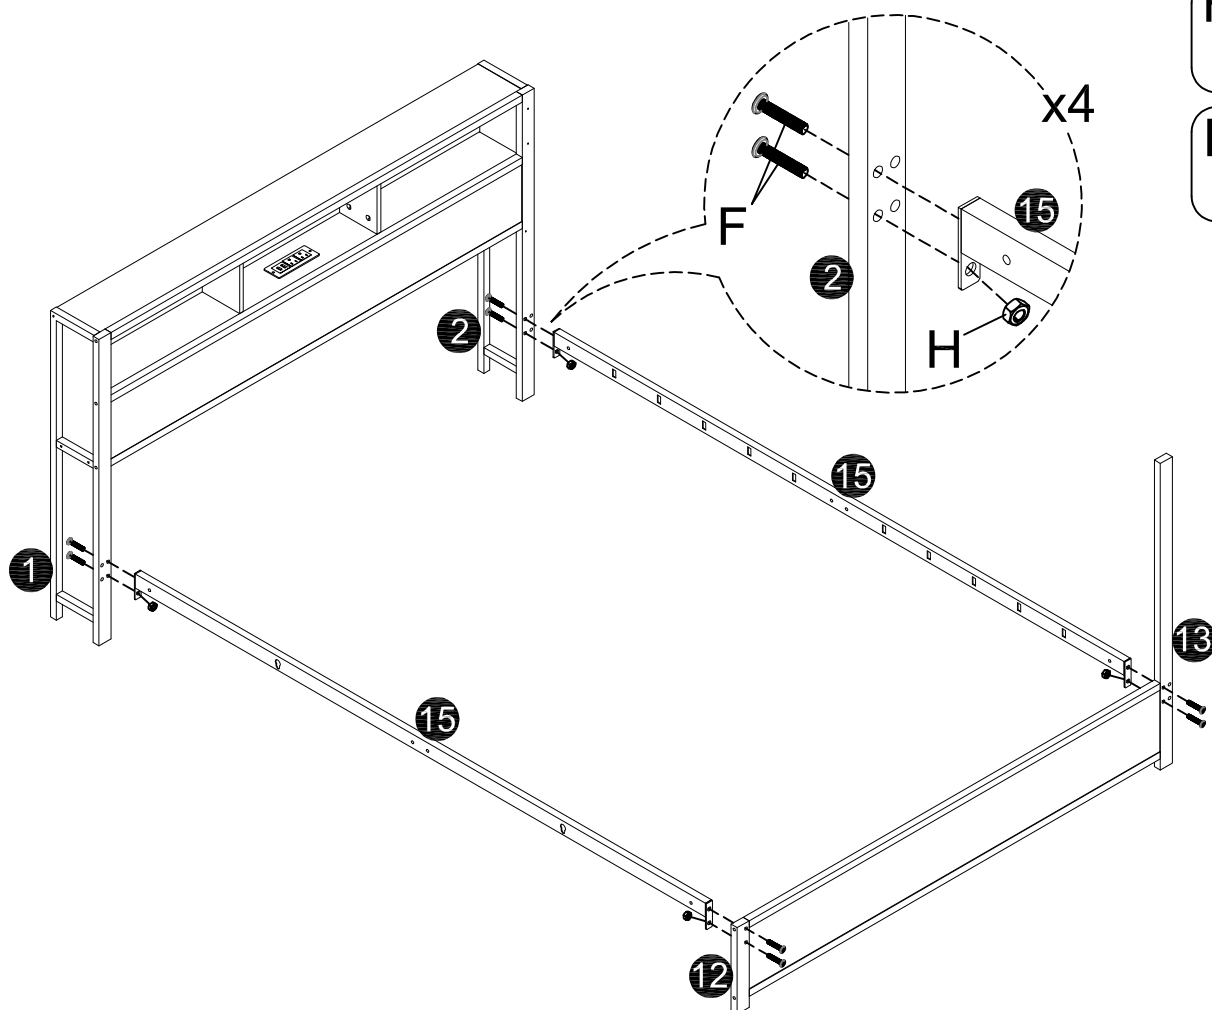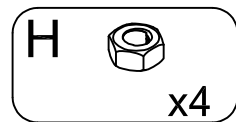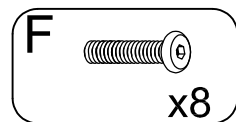


13

B



x10

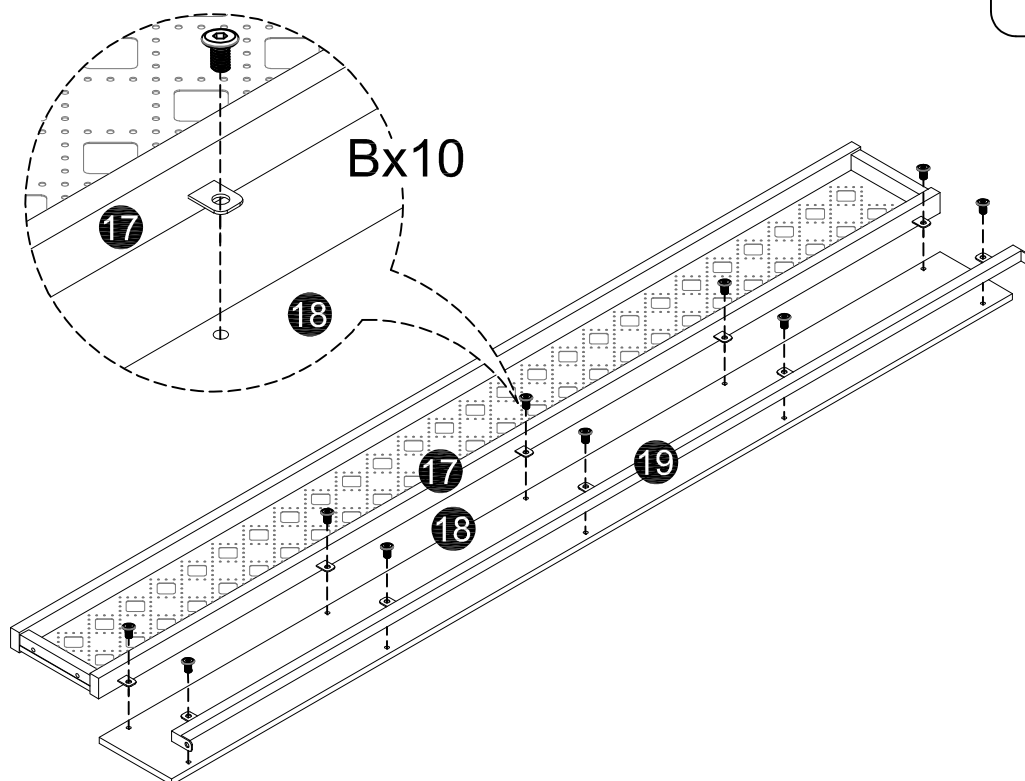

14

B




x2

D




x4


NOTE: Do not tighten bolts  
Just tighten it to about 80%  
and you're done.

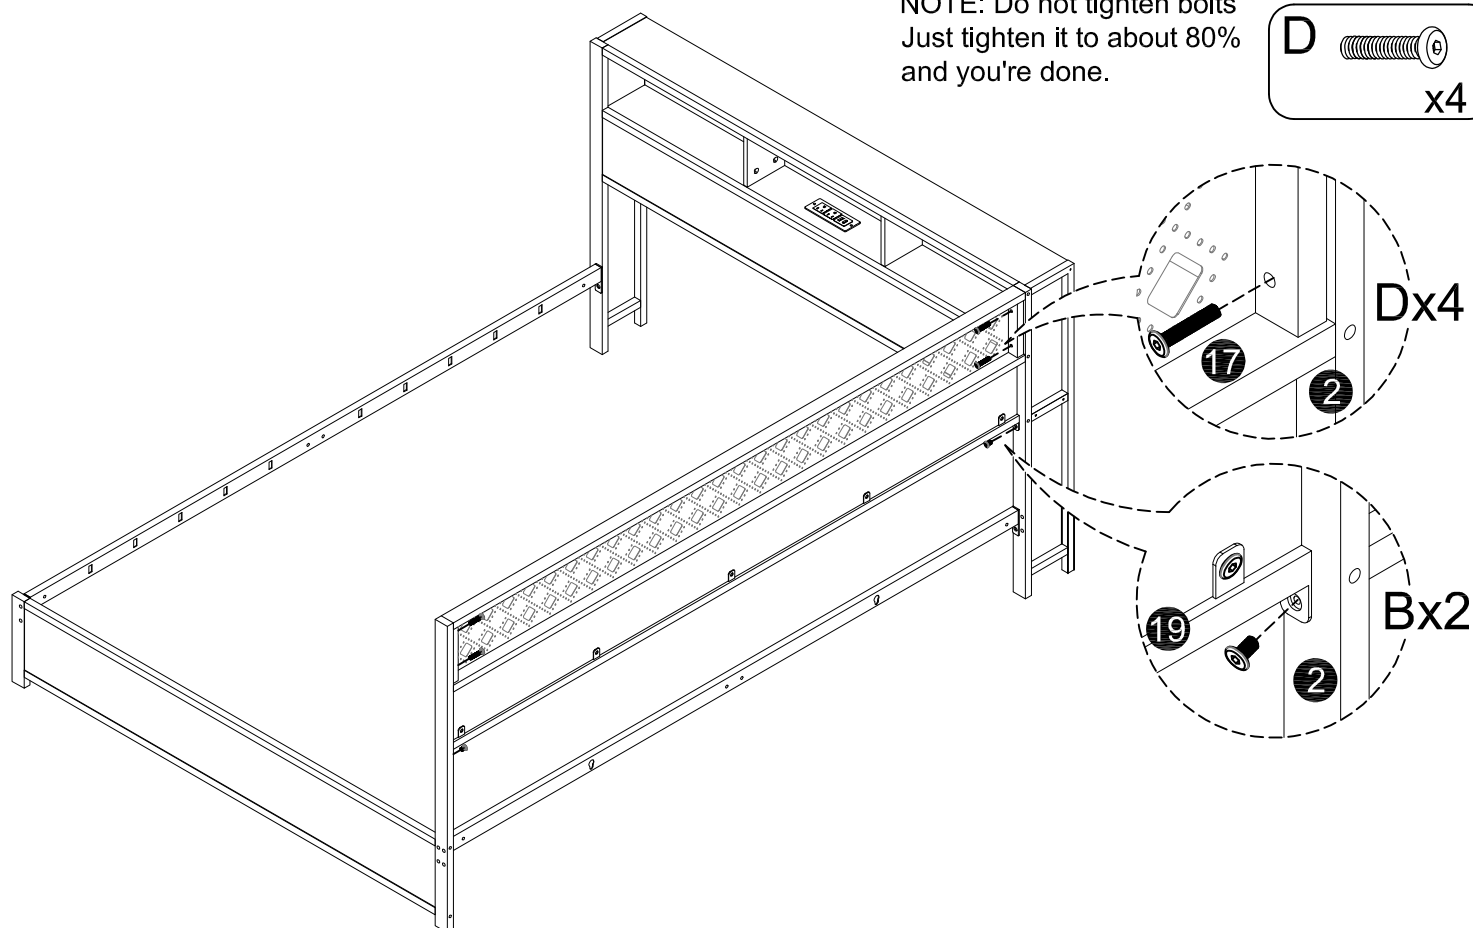



15

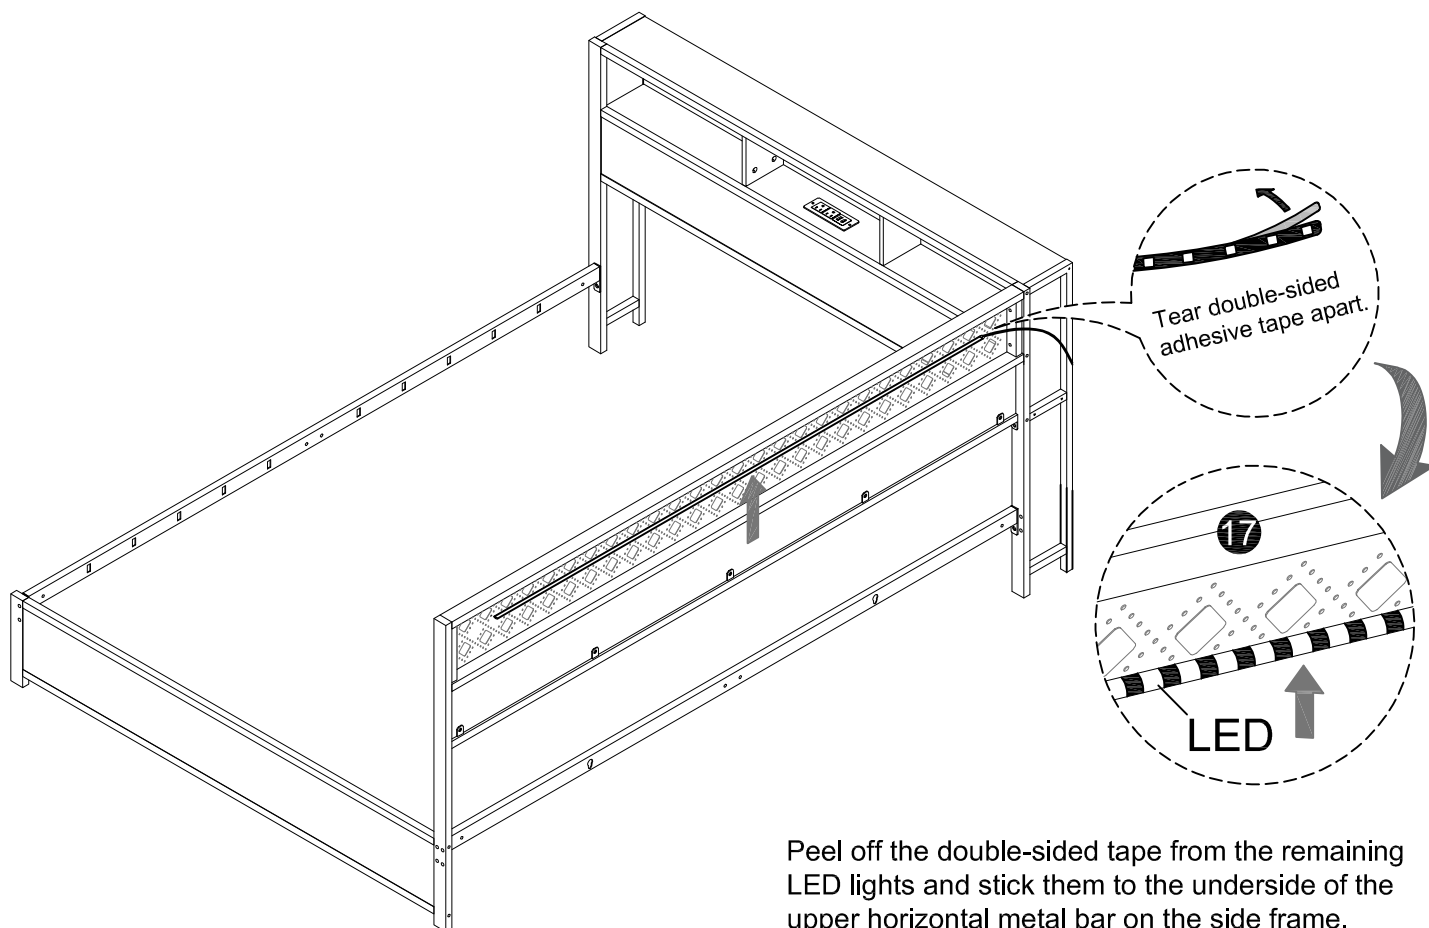


16

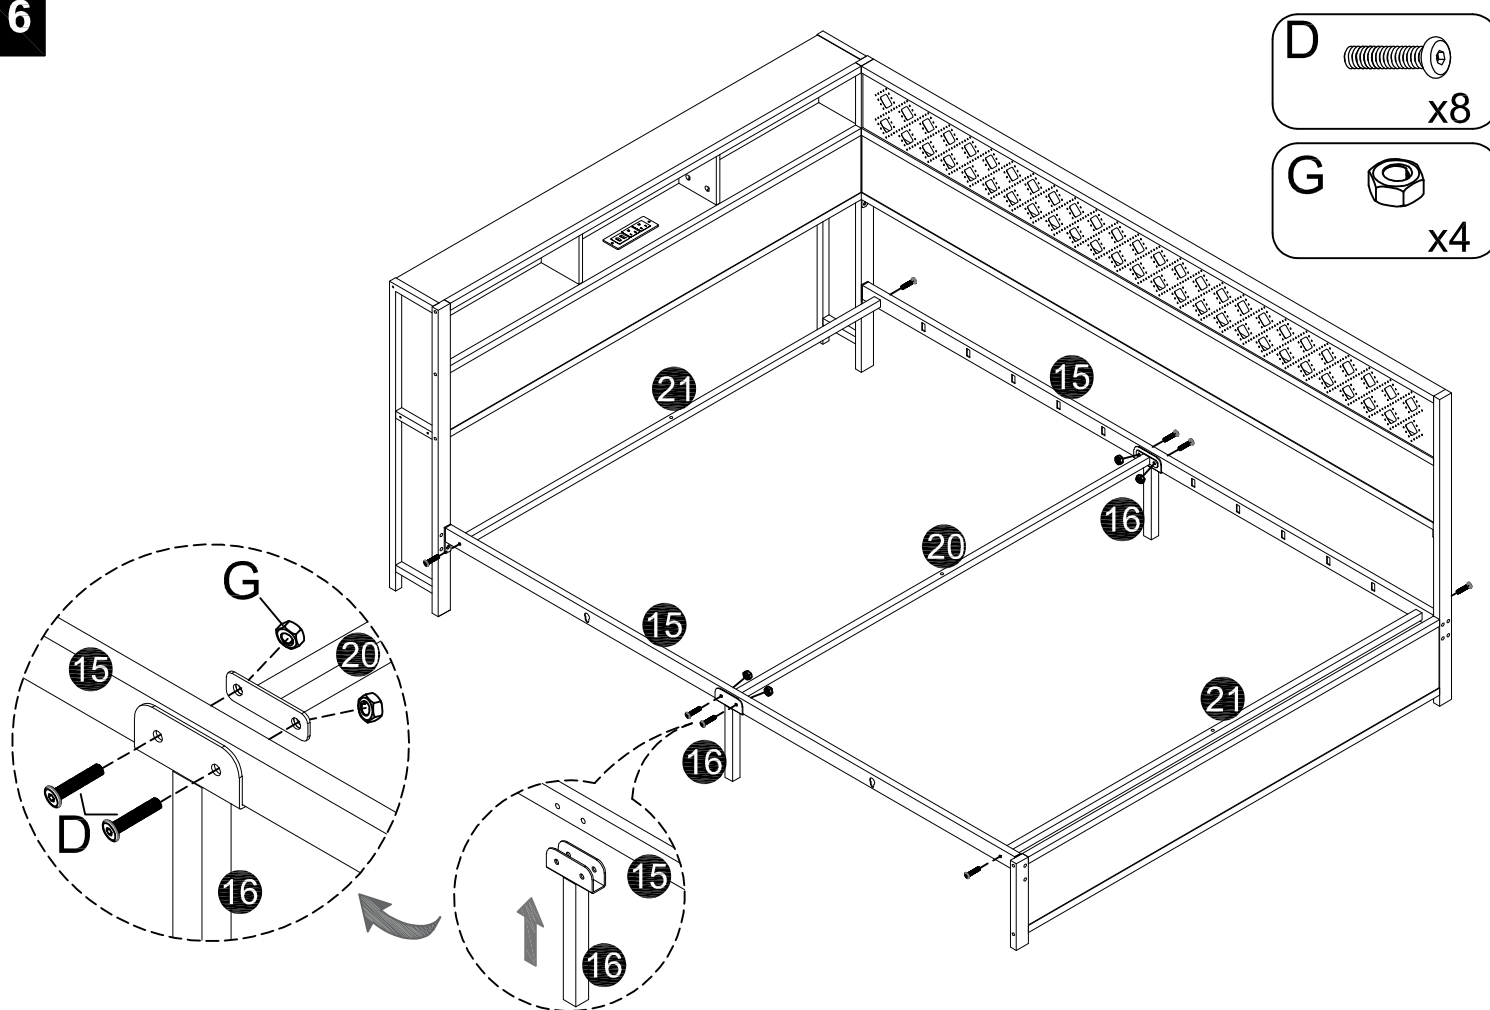


17


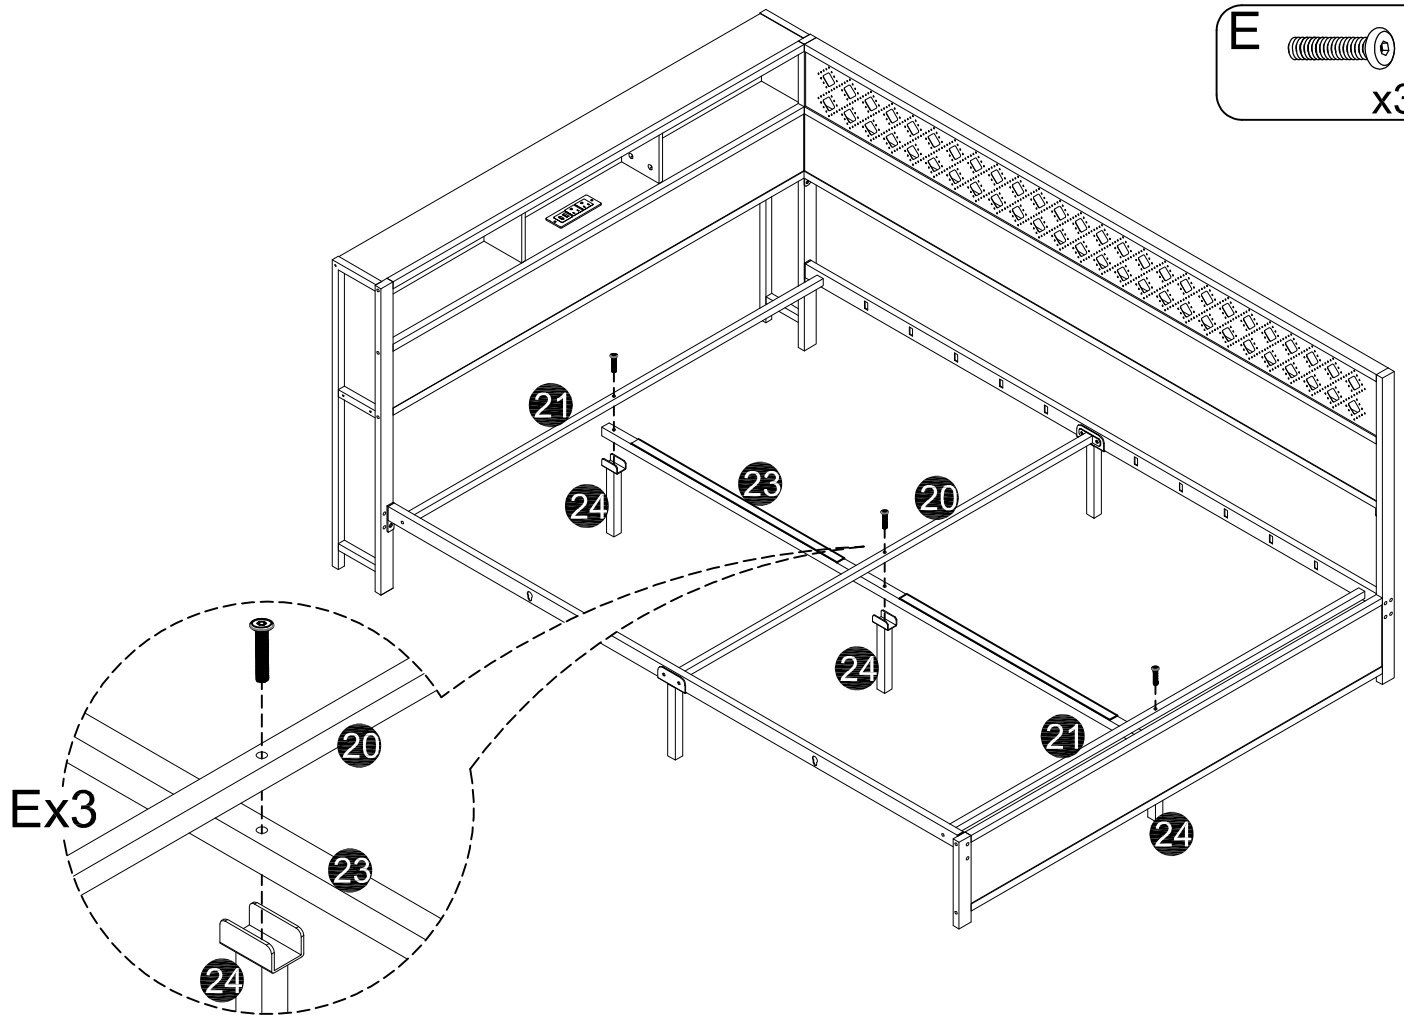
E  x3

18

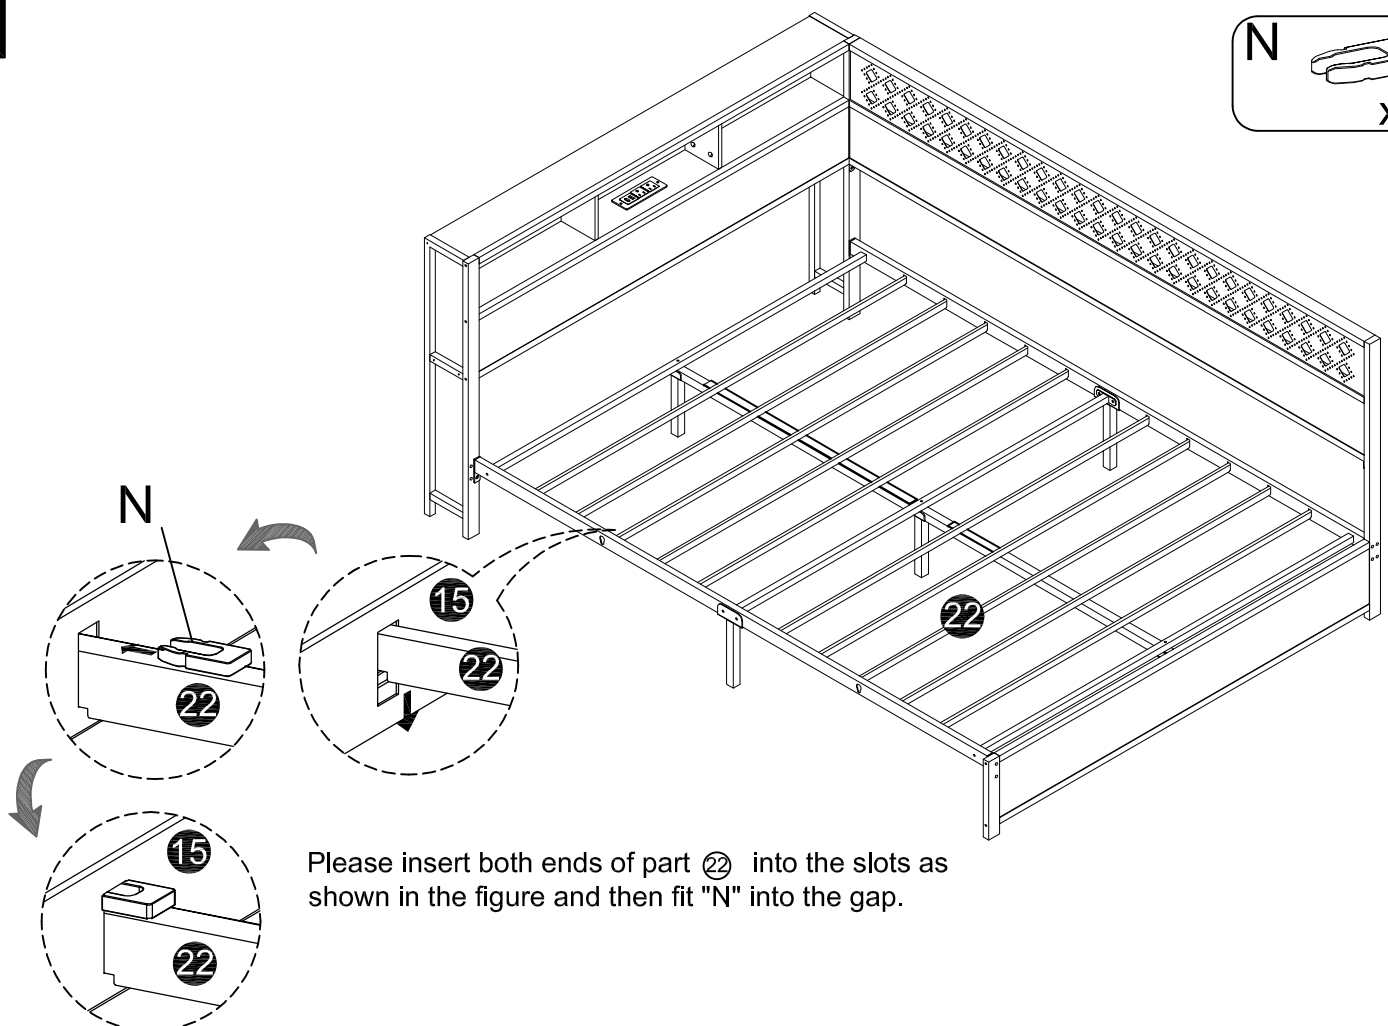N  x20


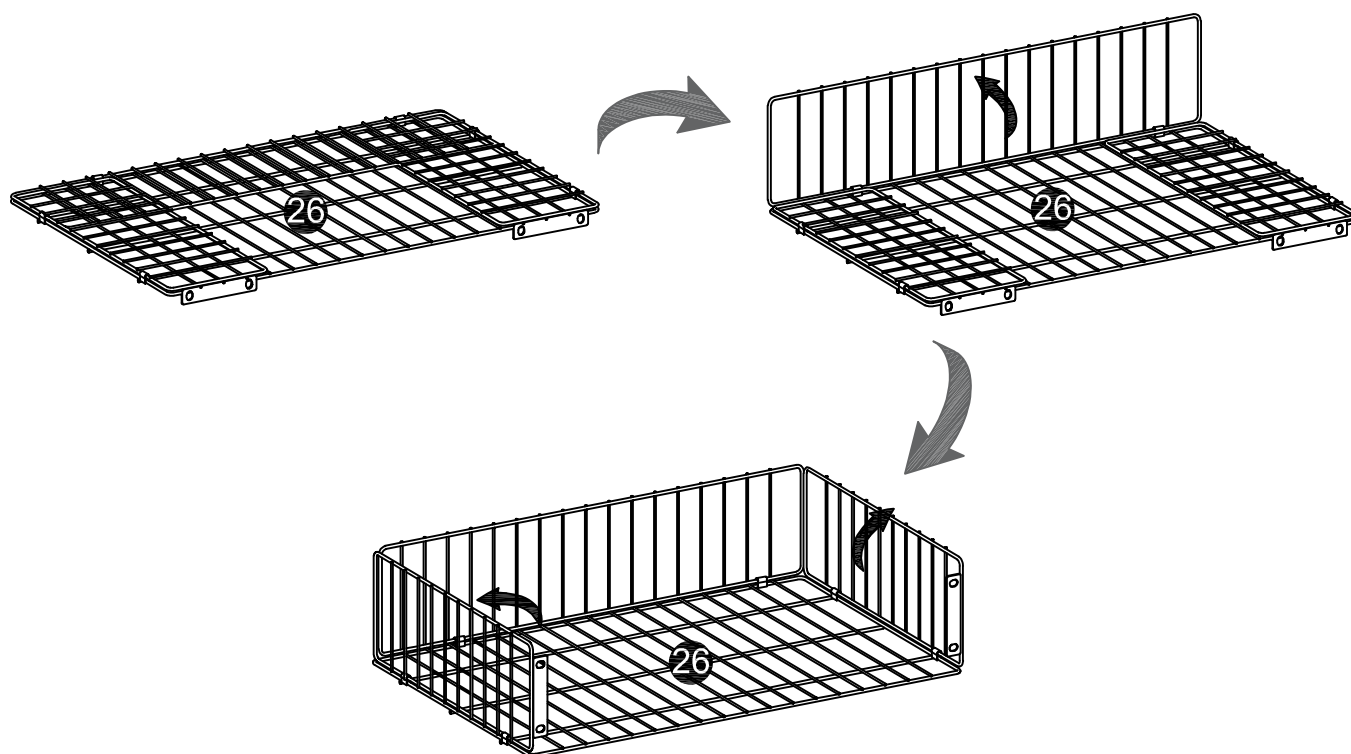


x2

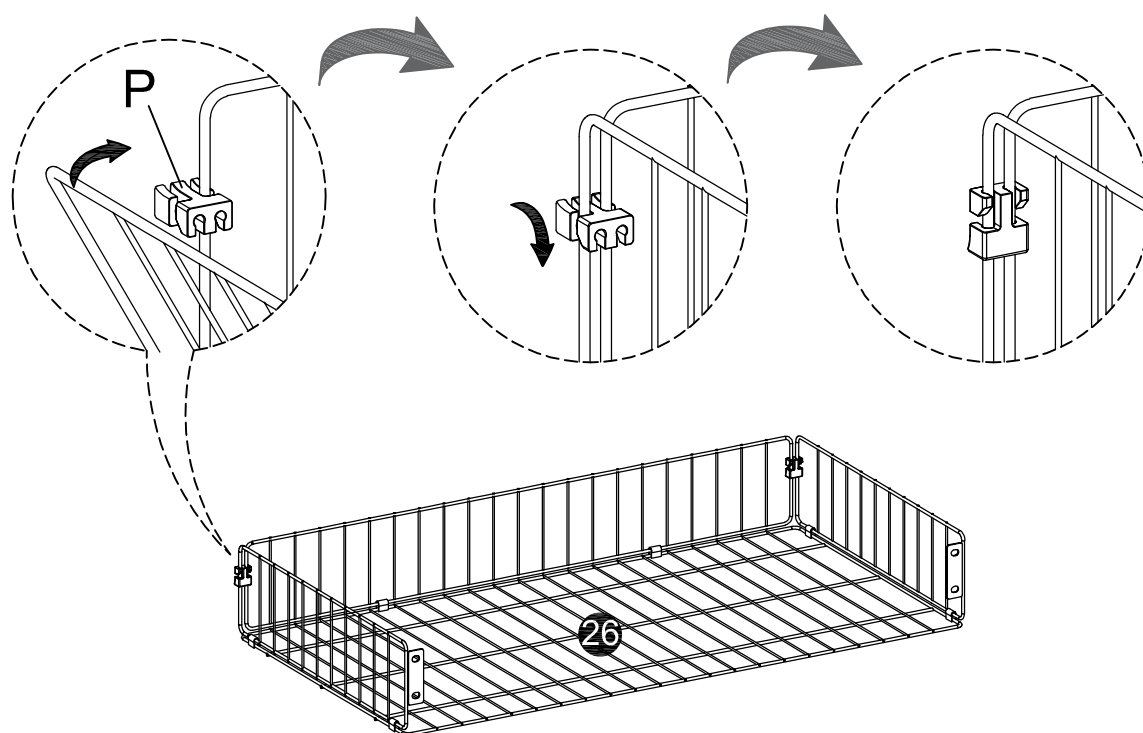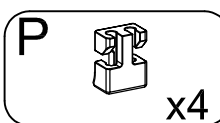



x2

21

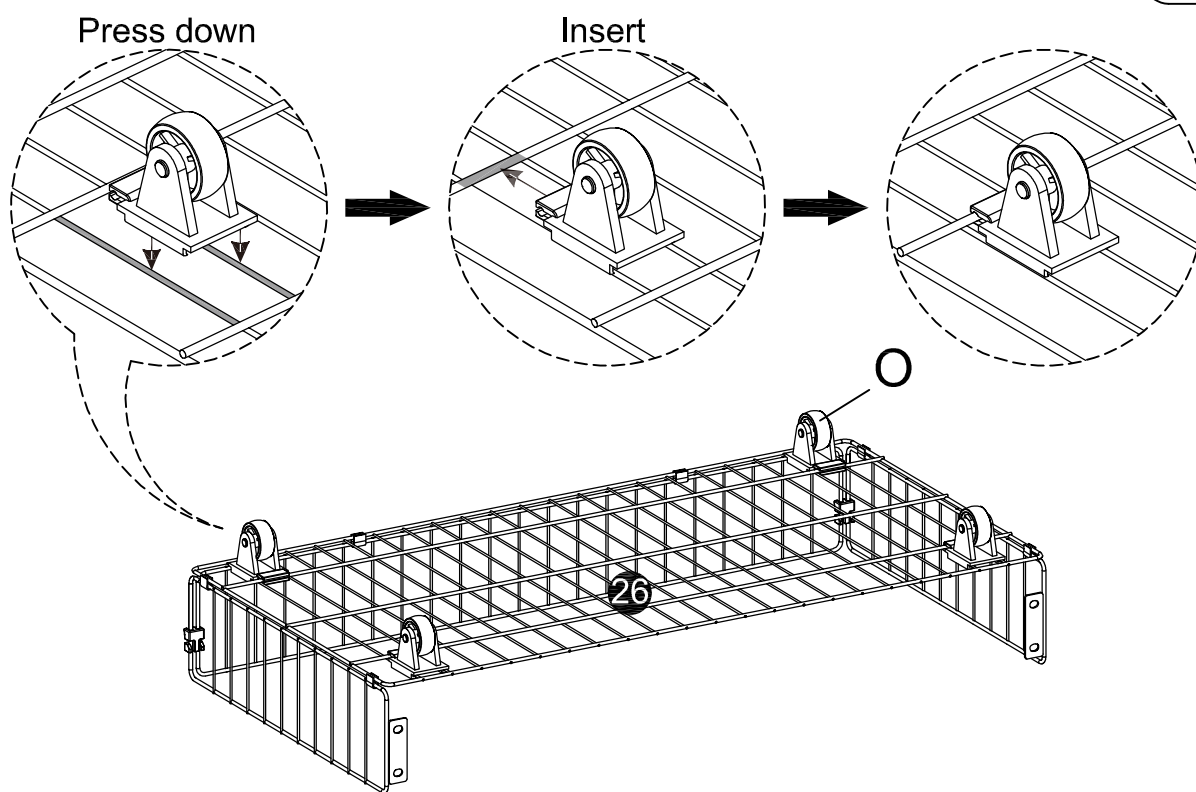


x2

22

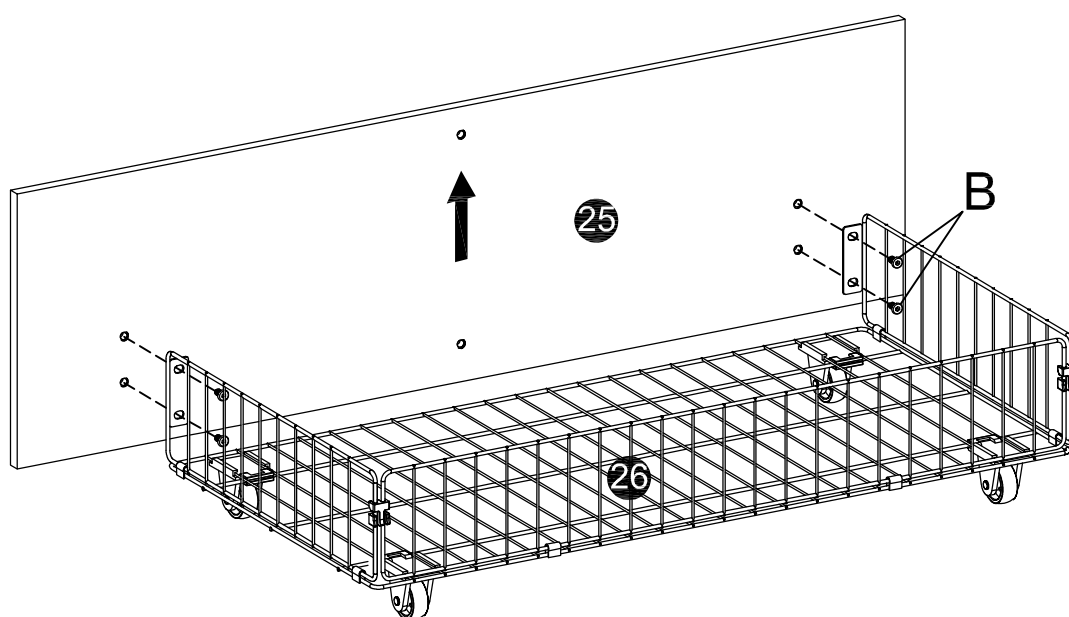


x2


23

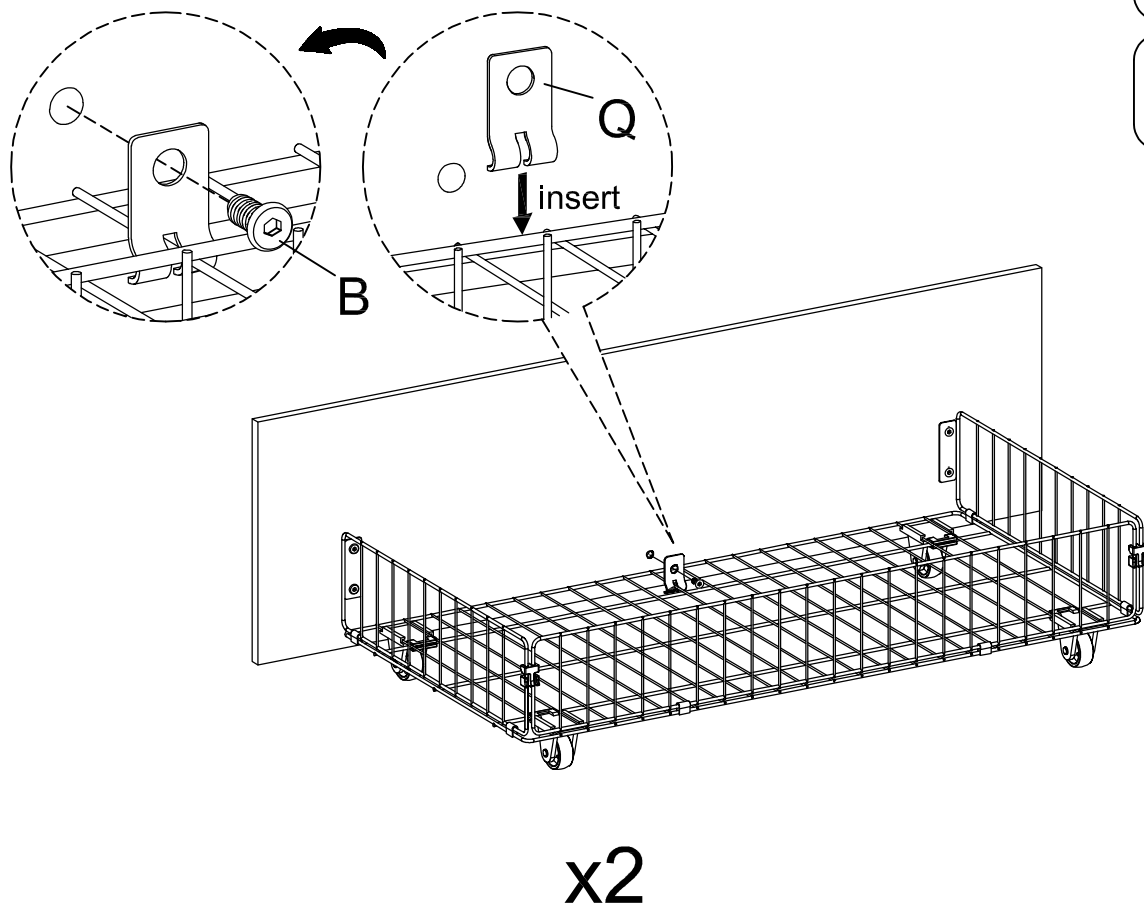

24

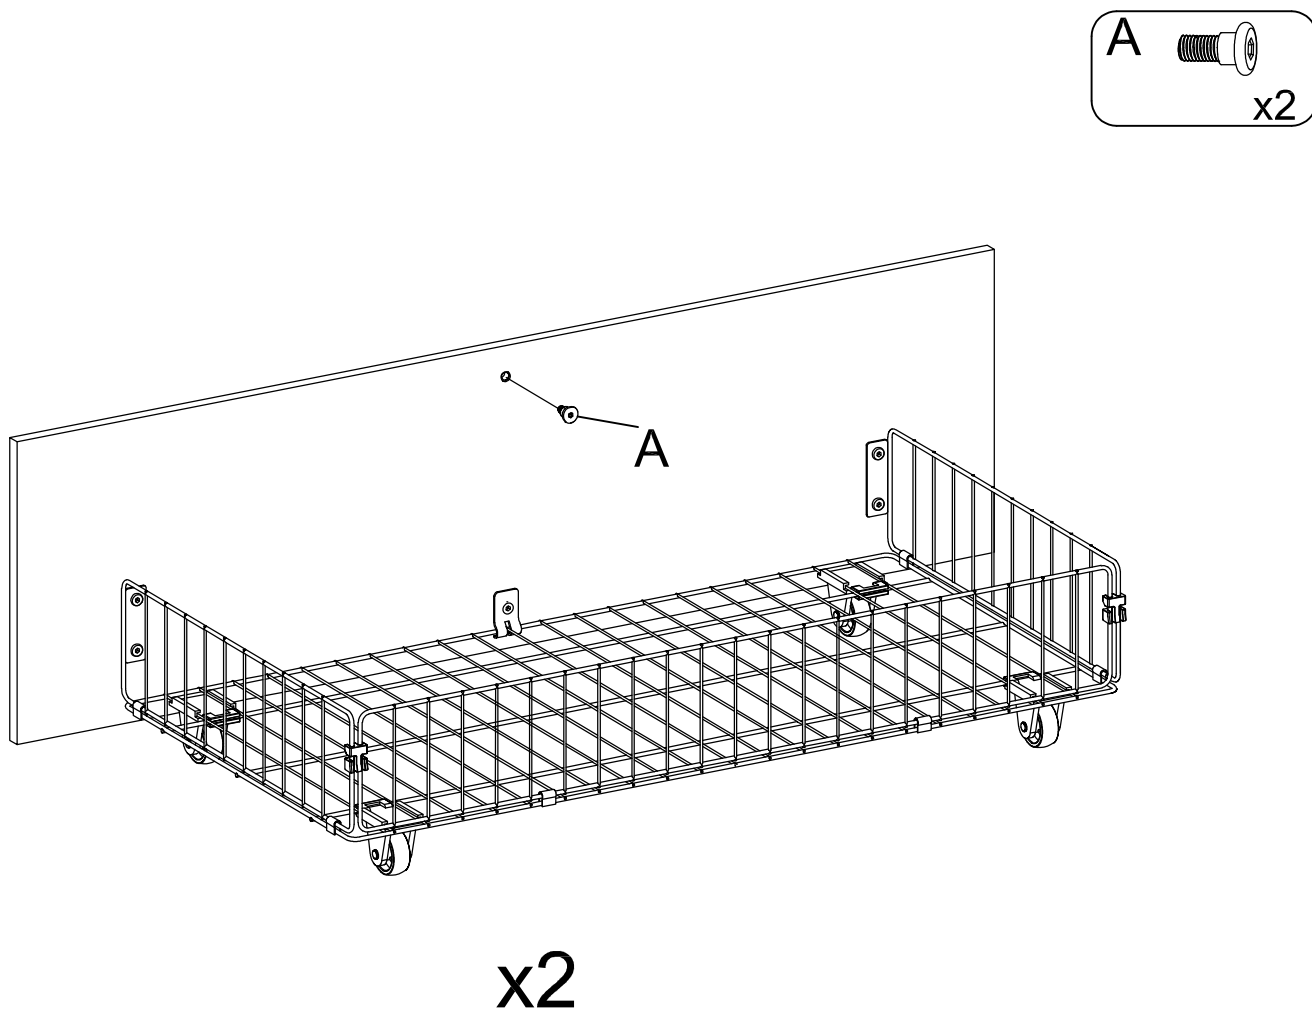


25


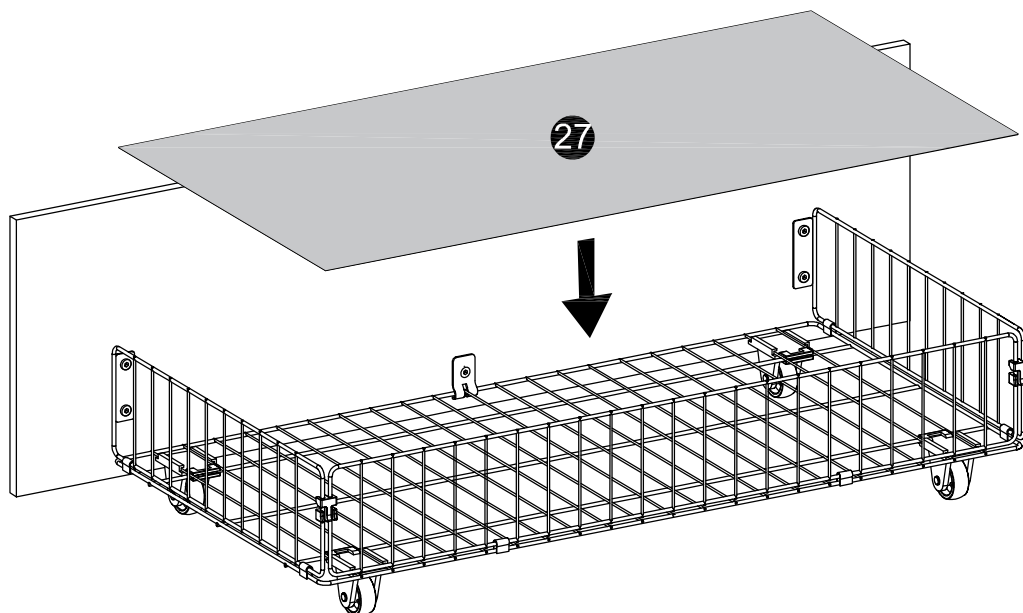


x2

26

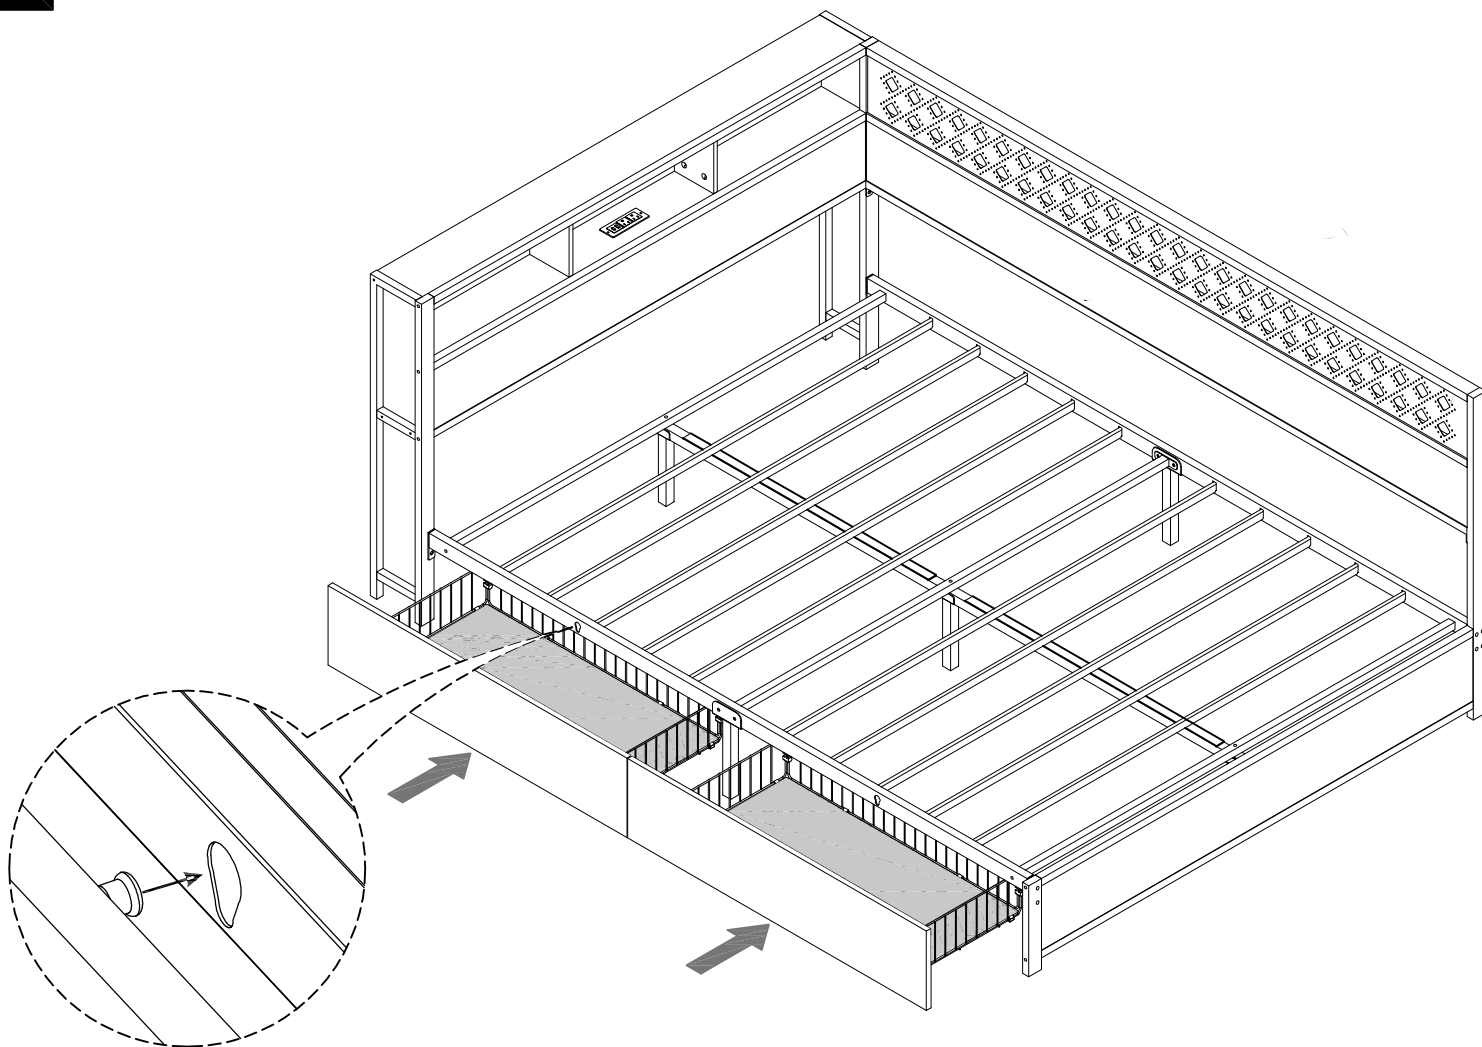


Put the (A) screws into the whole and press it into the bottom of the “” hole.

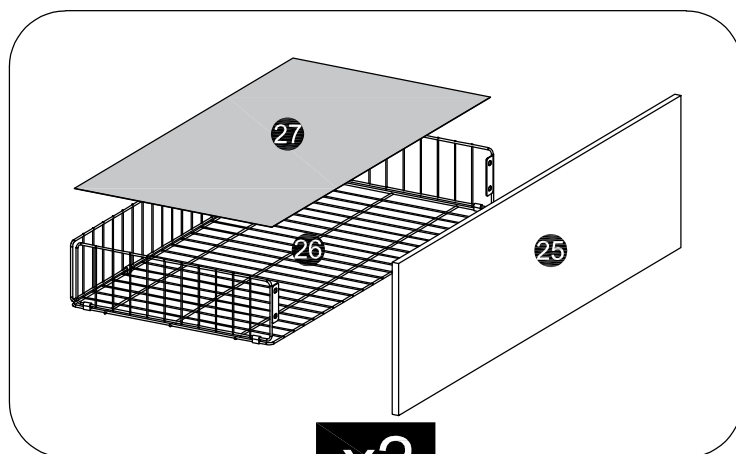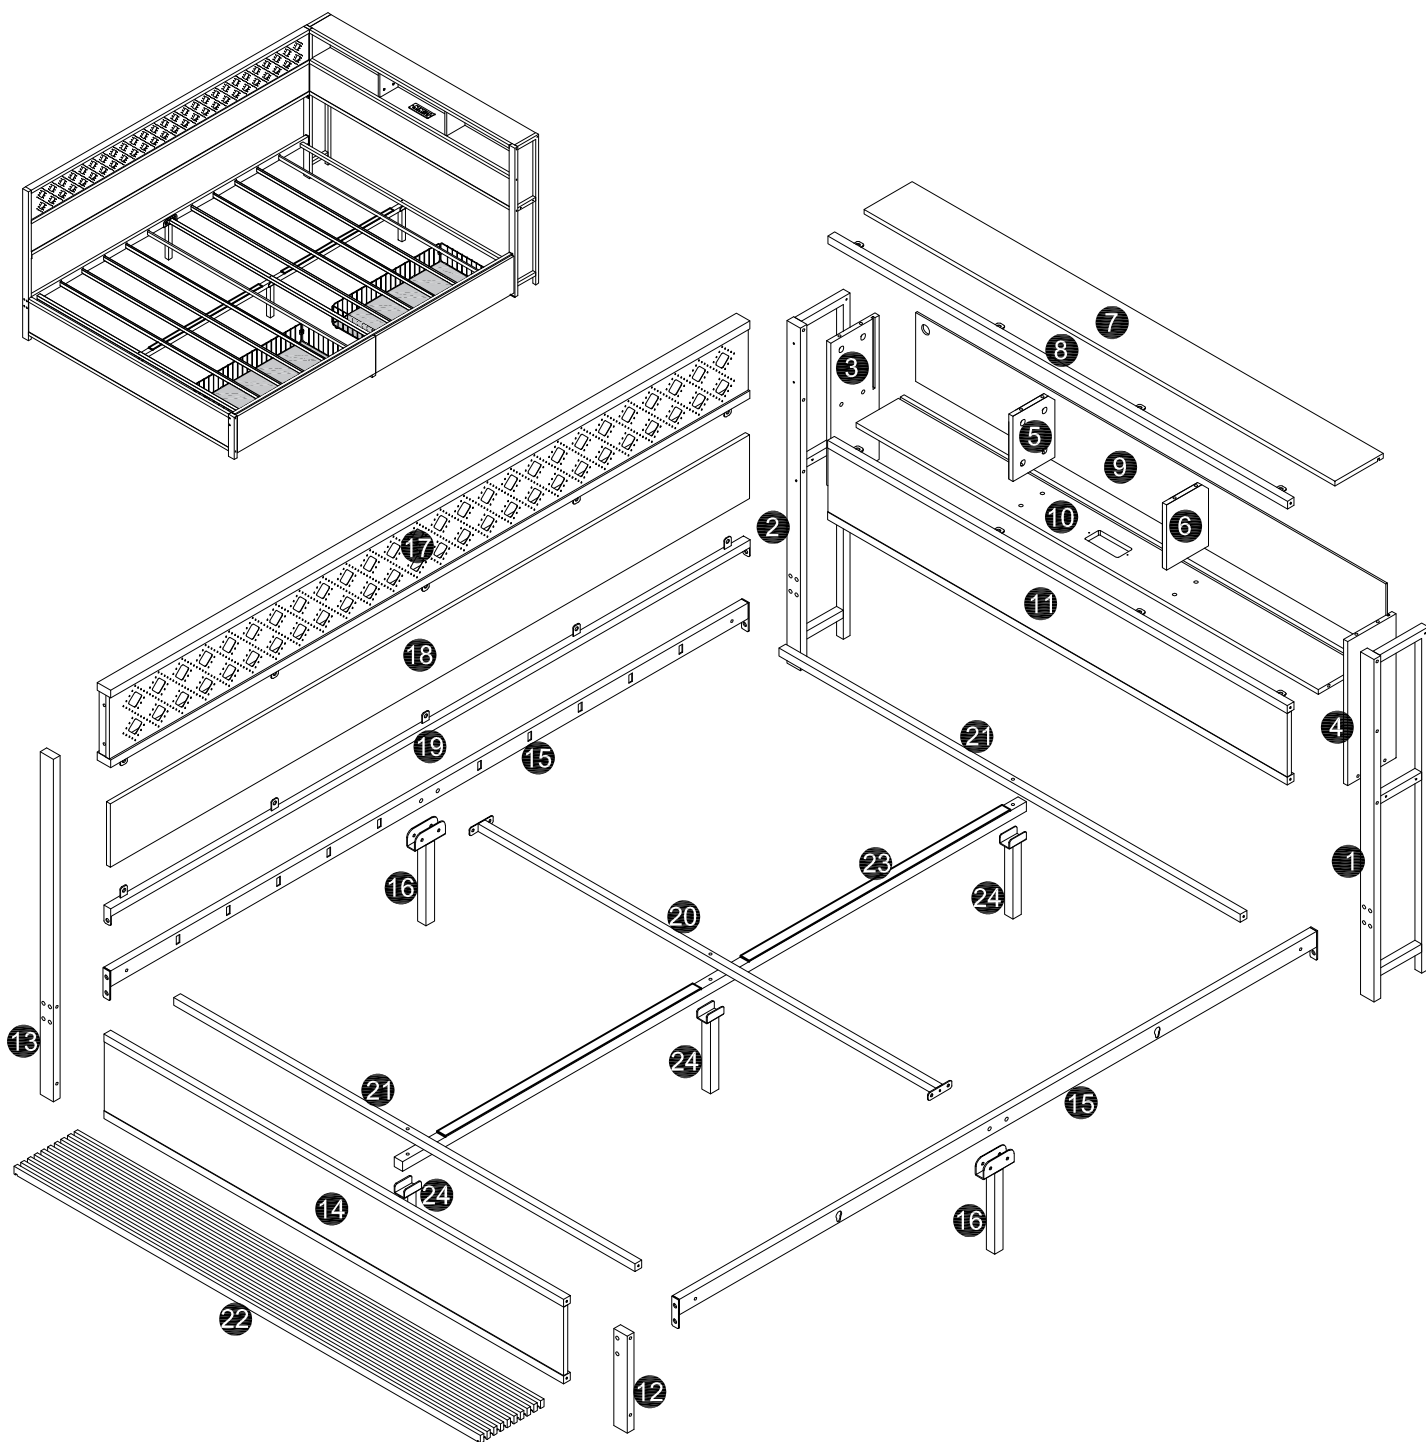

x2



1

I  x8


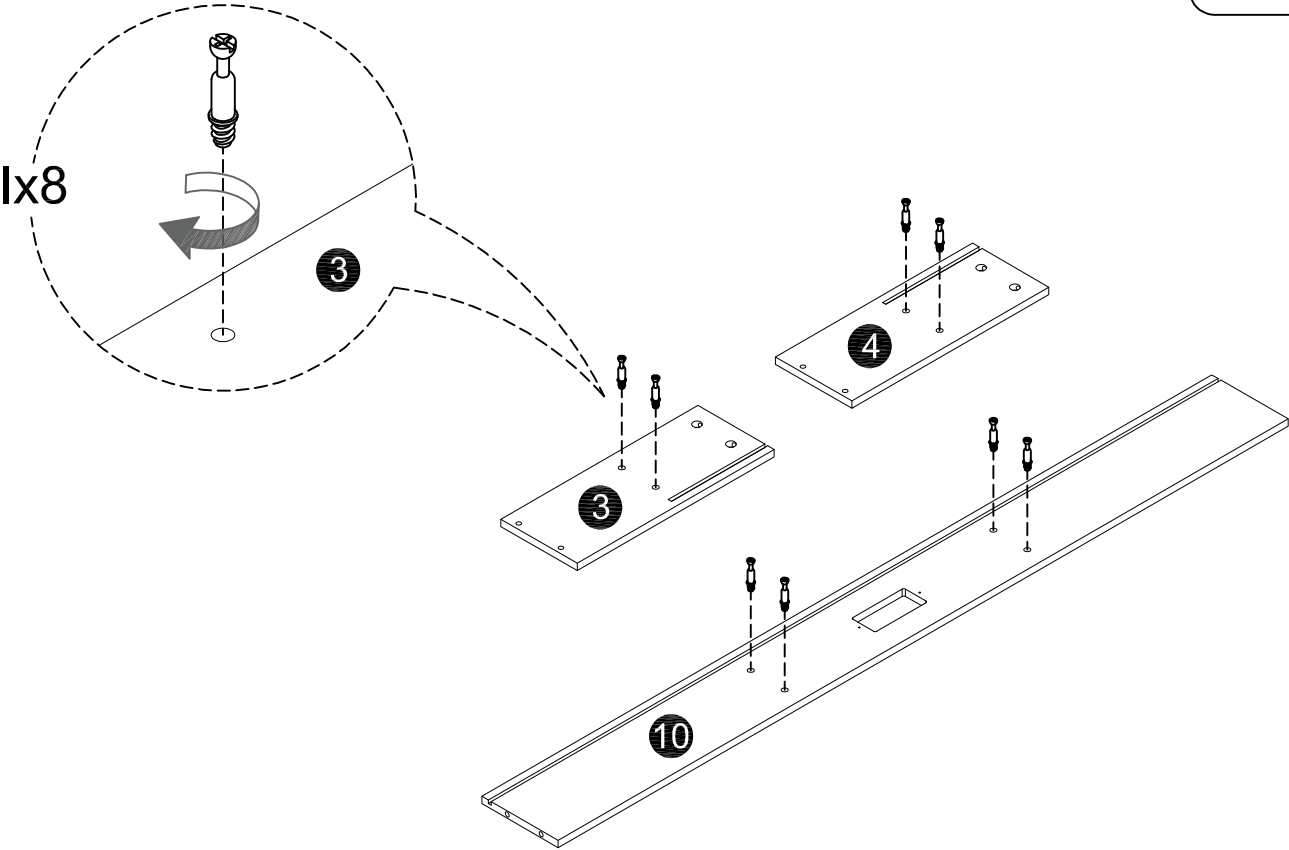


2


J  x4

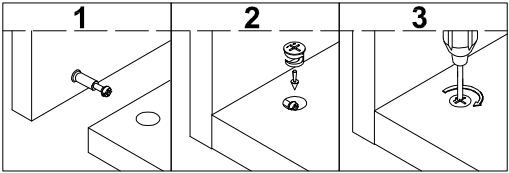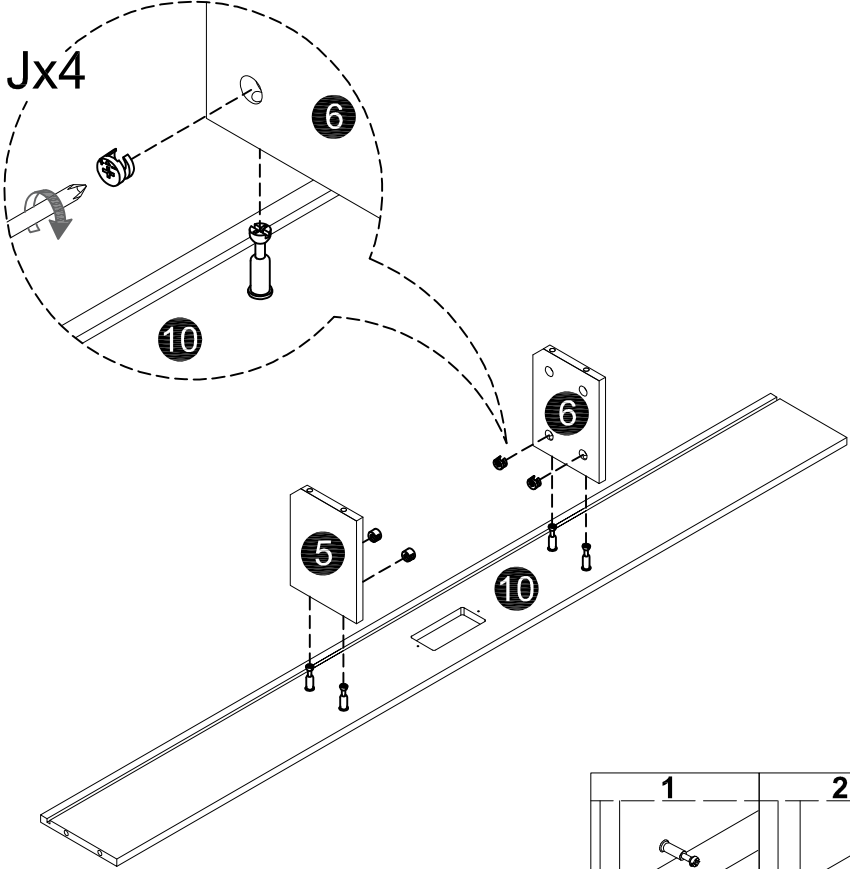


3

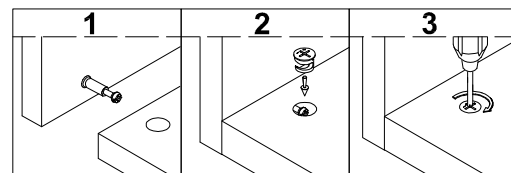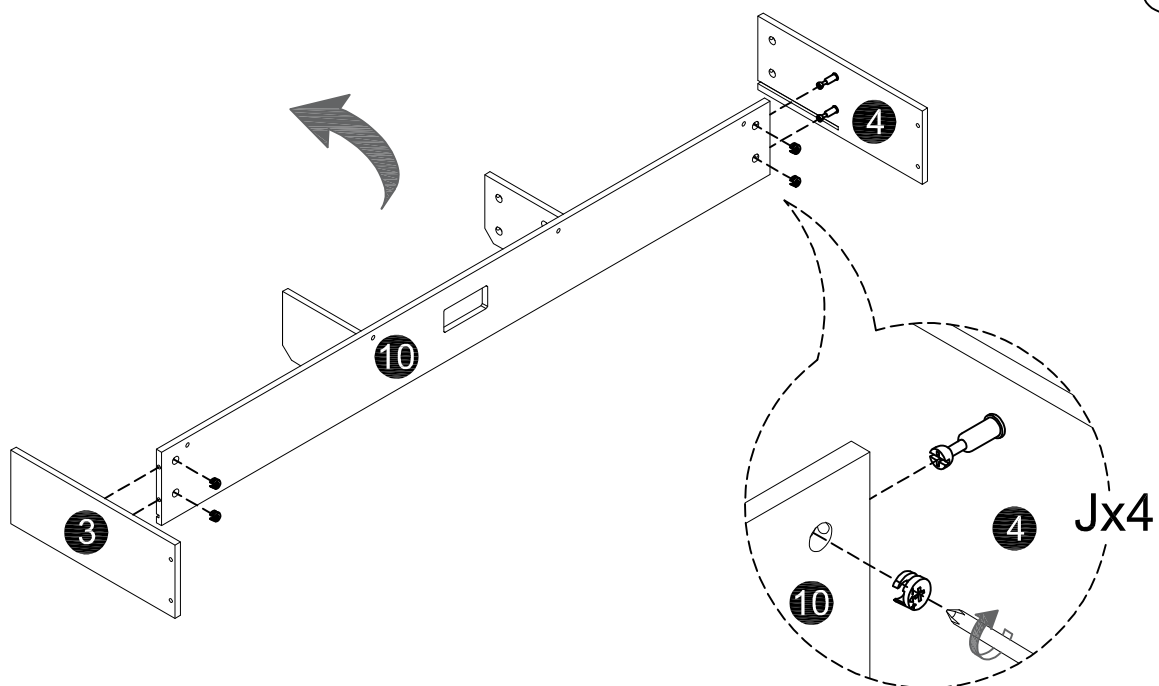J  x4

4

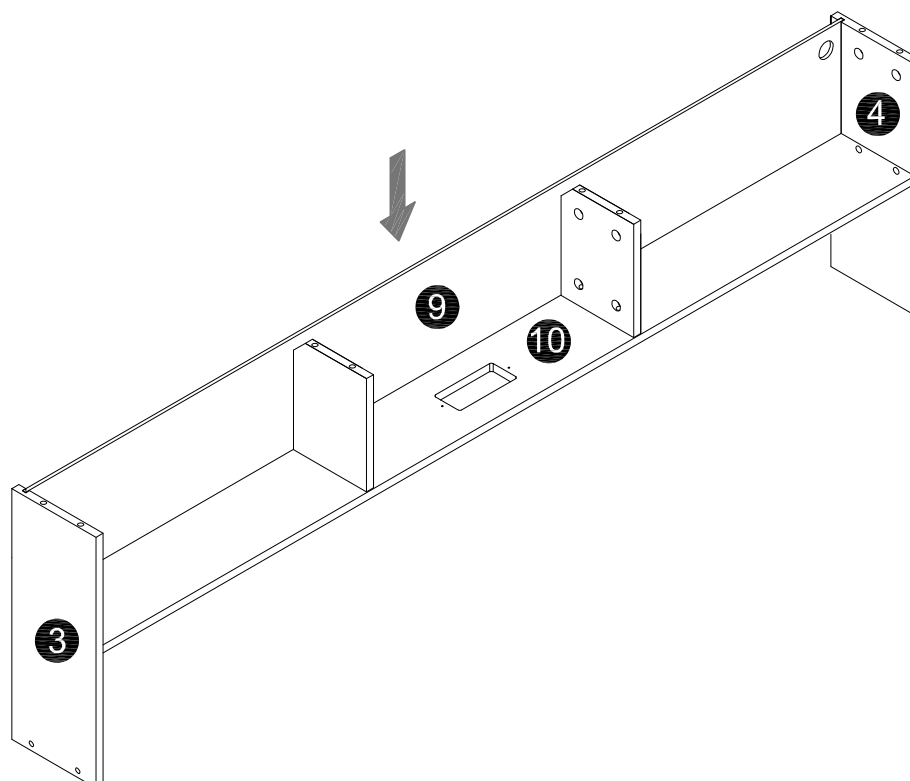

5

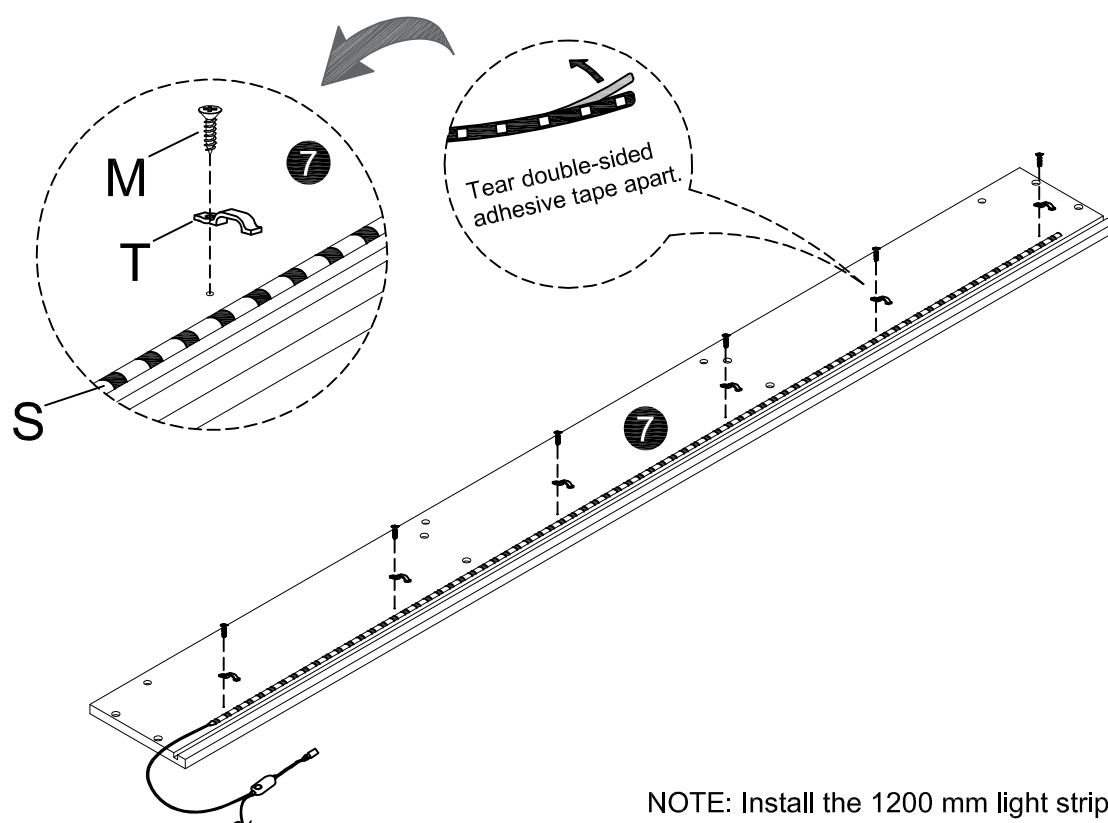

M

x6

S


x1

T

x6

NOTE: Install the 1200 mm light strip on the front panel, and install the 1800 mm light strip on the metal mesh side.

6

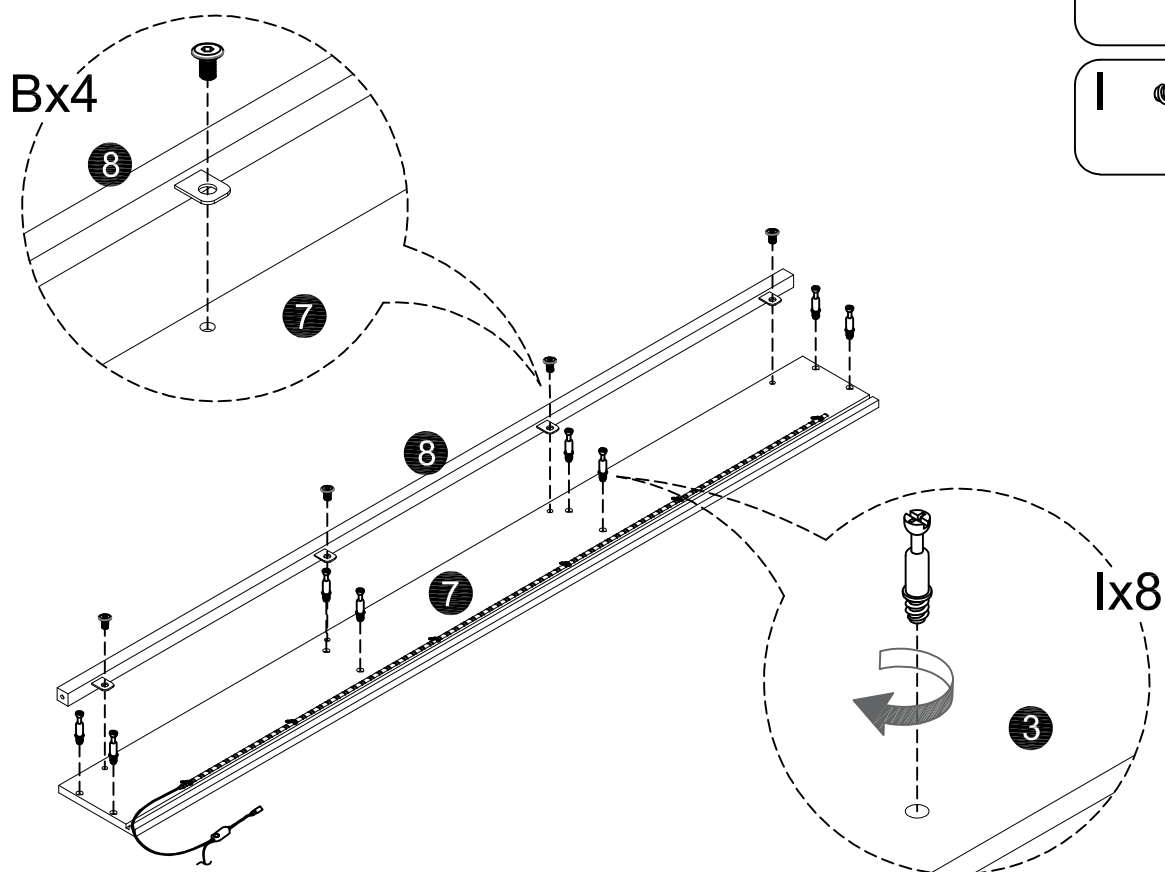


B





x4


I


x8

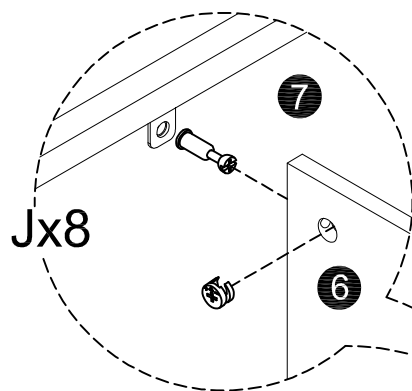


NOTE: Pass the remaining LED light through the hole in the back panel before installing the top panel of the headboard.

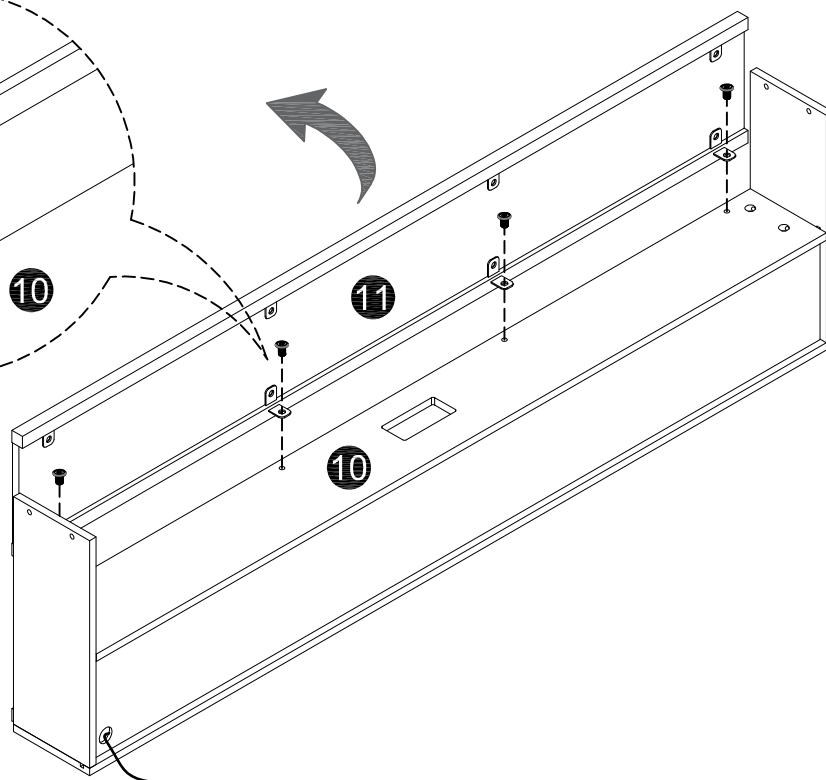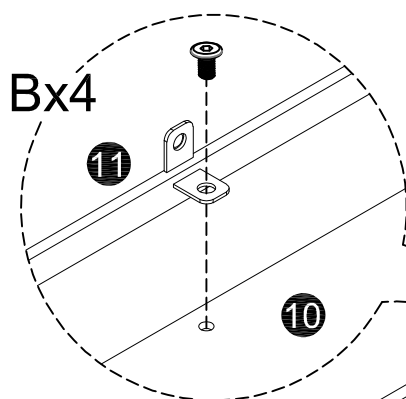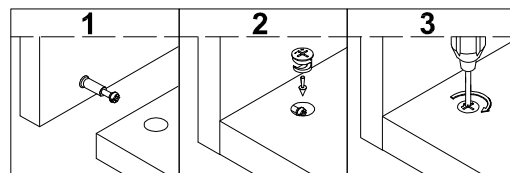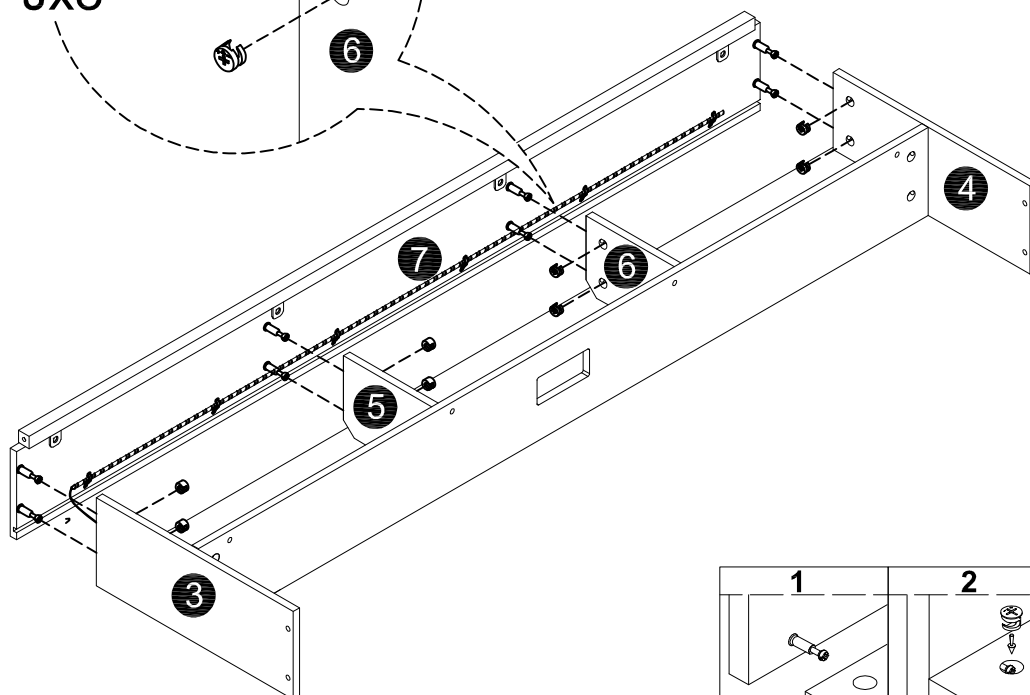

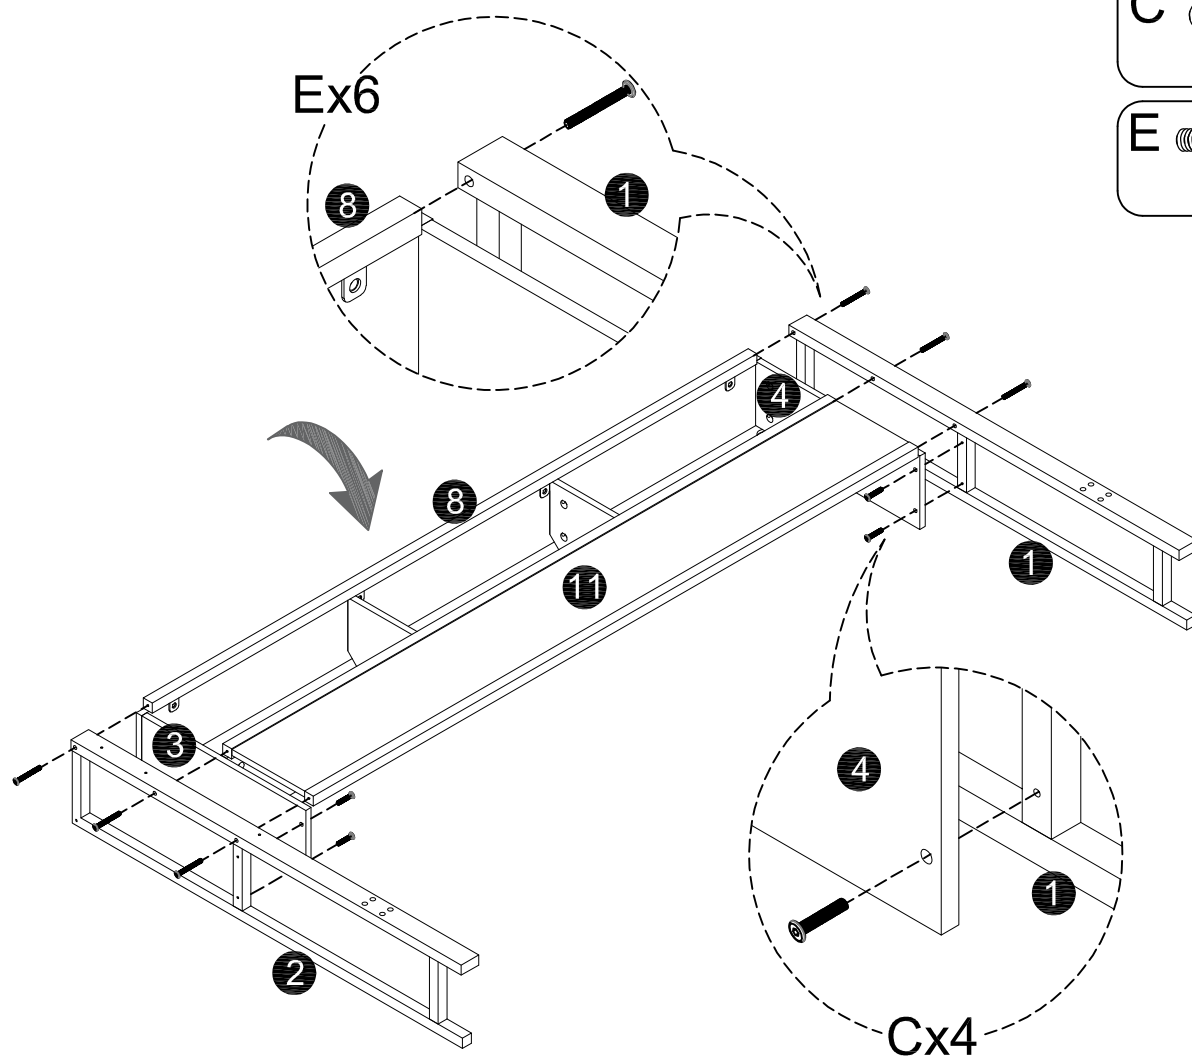


C  x4

E  x6


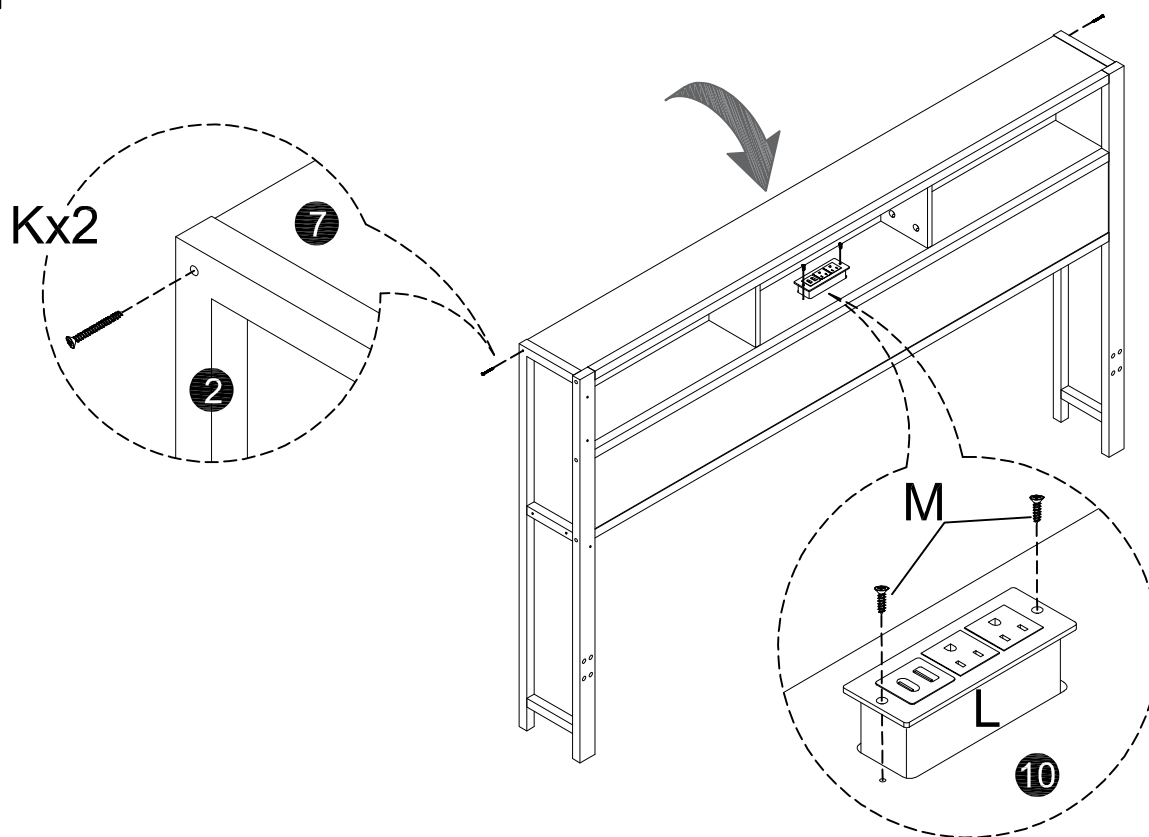


K  x2




L  x1

M  x2

11

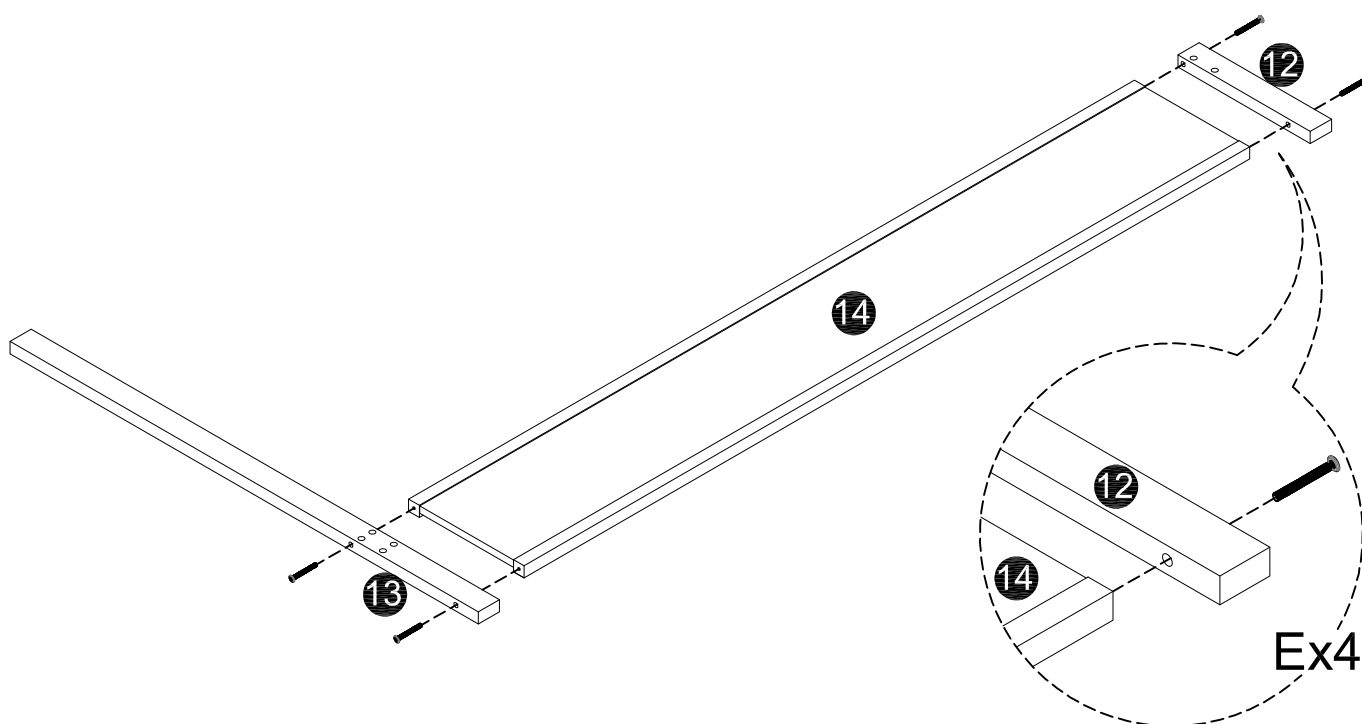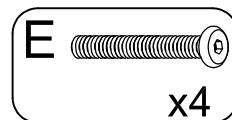

12

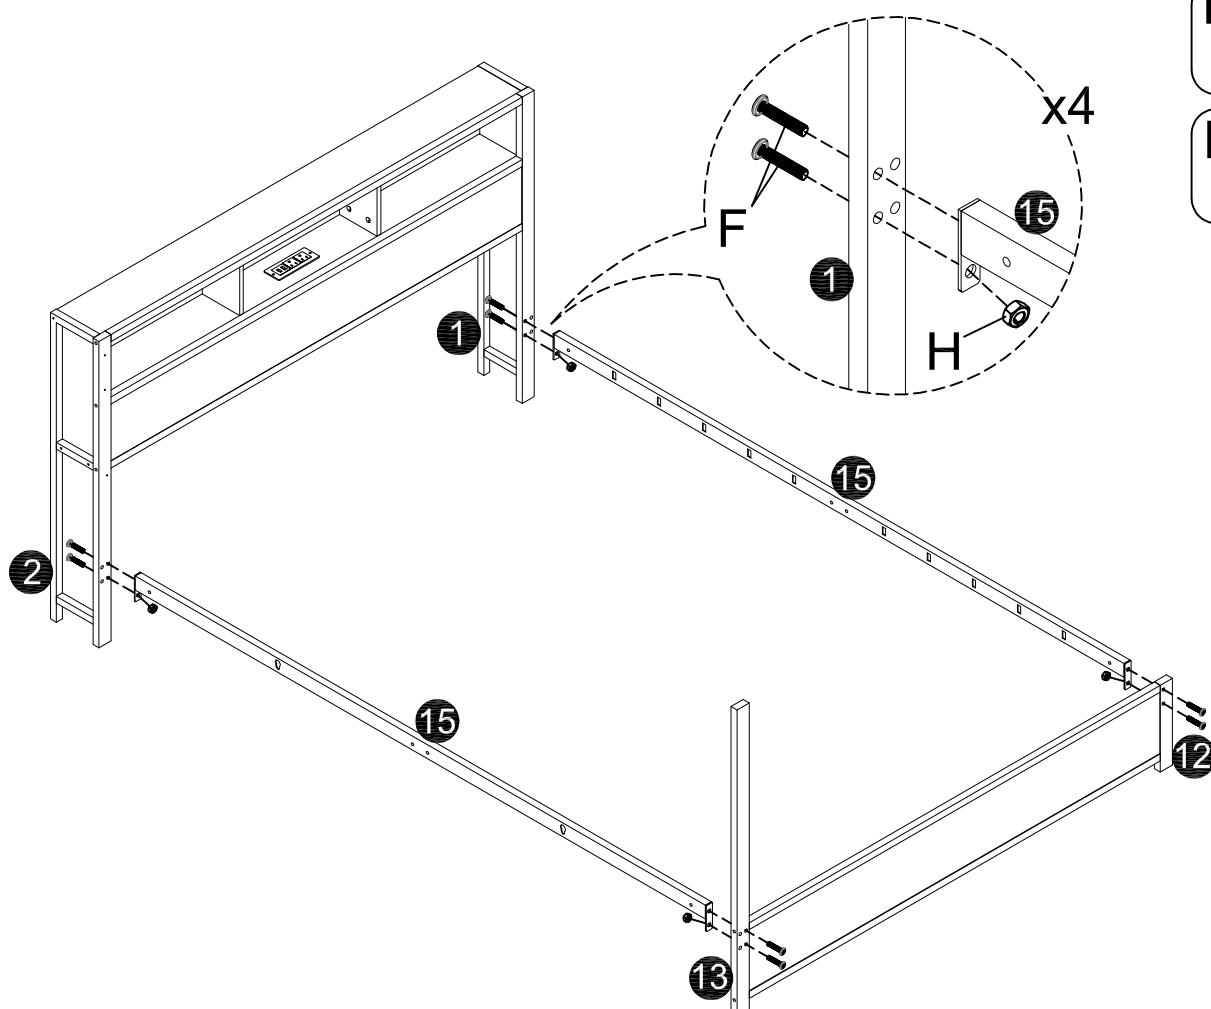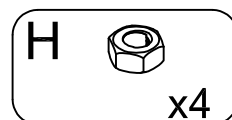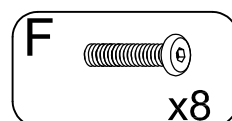


13

B



x10

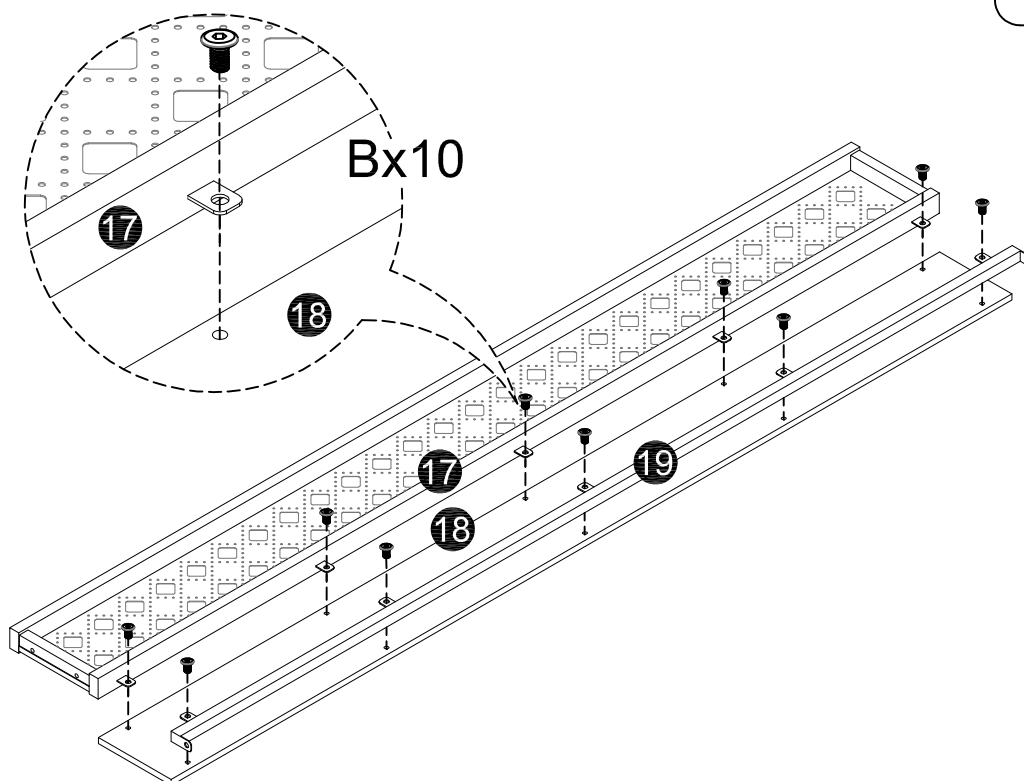

14

B




x2

D





x4

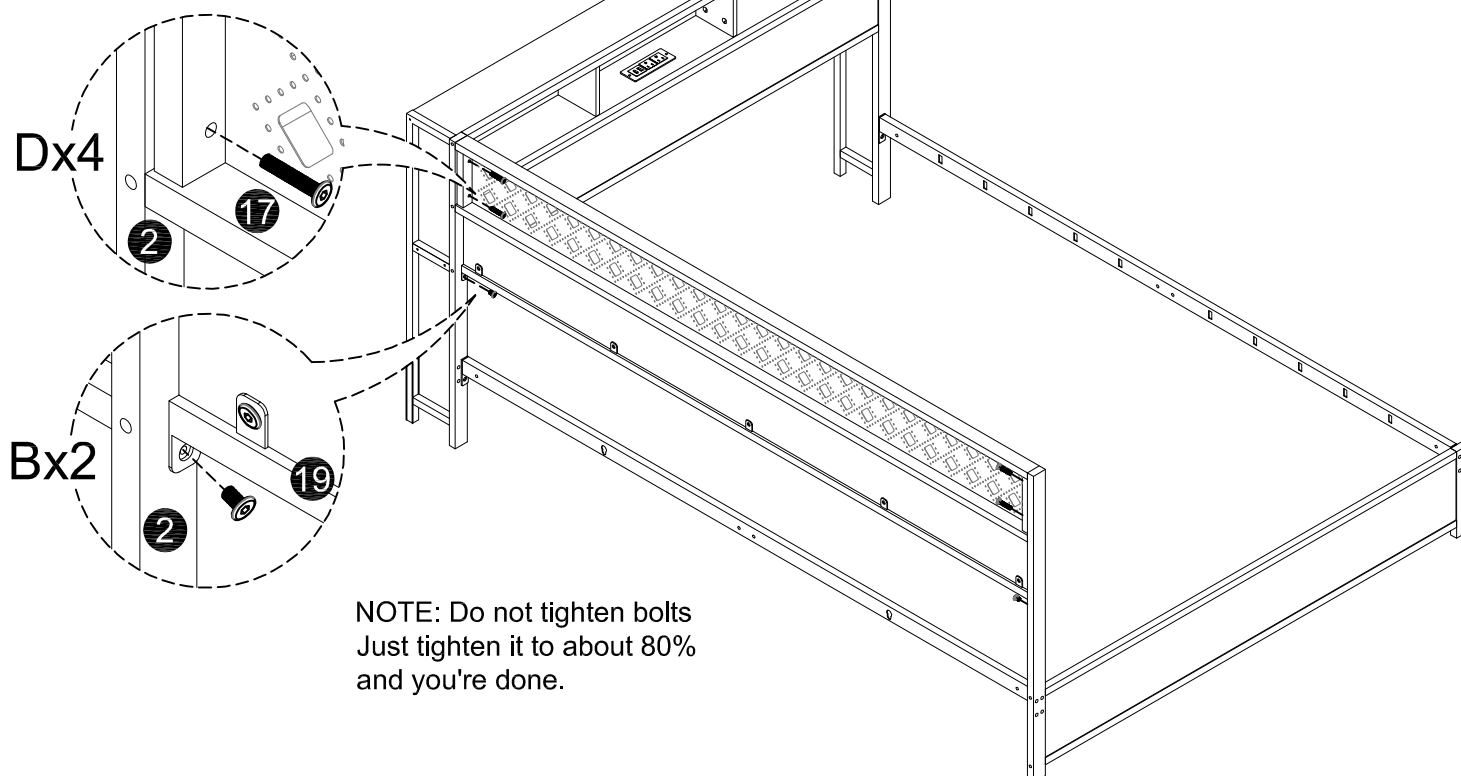



NOTE: Do not tighten bolts  
Just tighten it to about 80%  
and you're done.

16

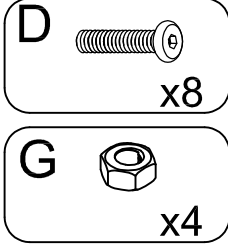


17

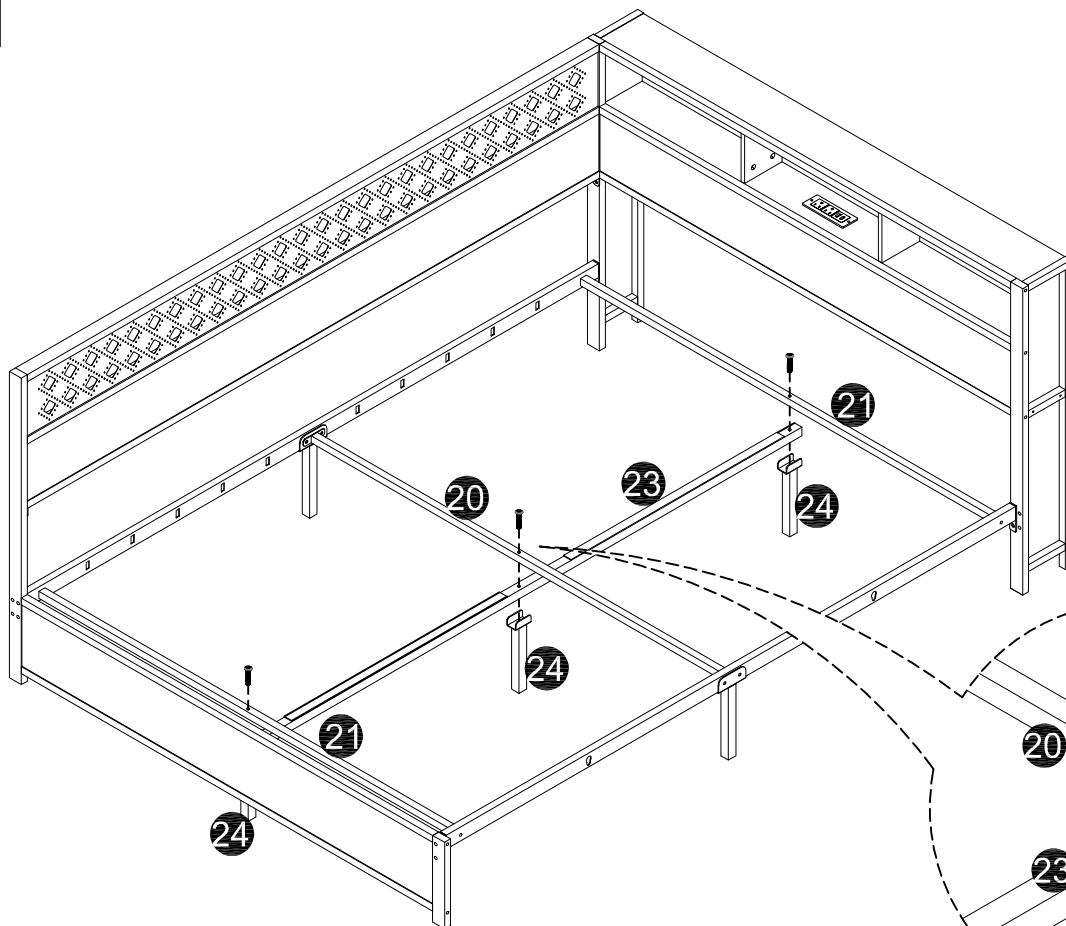


E  x3

18


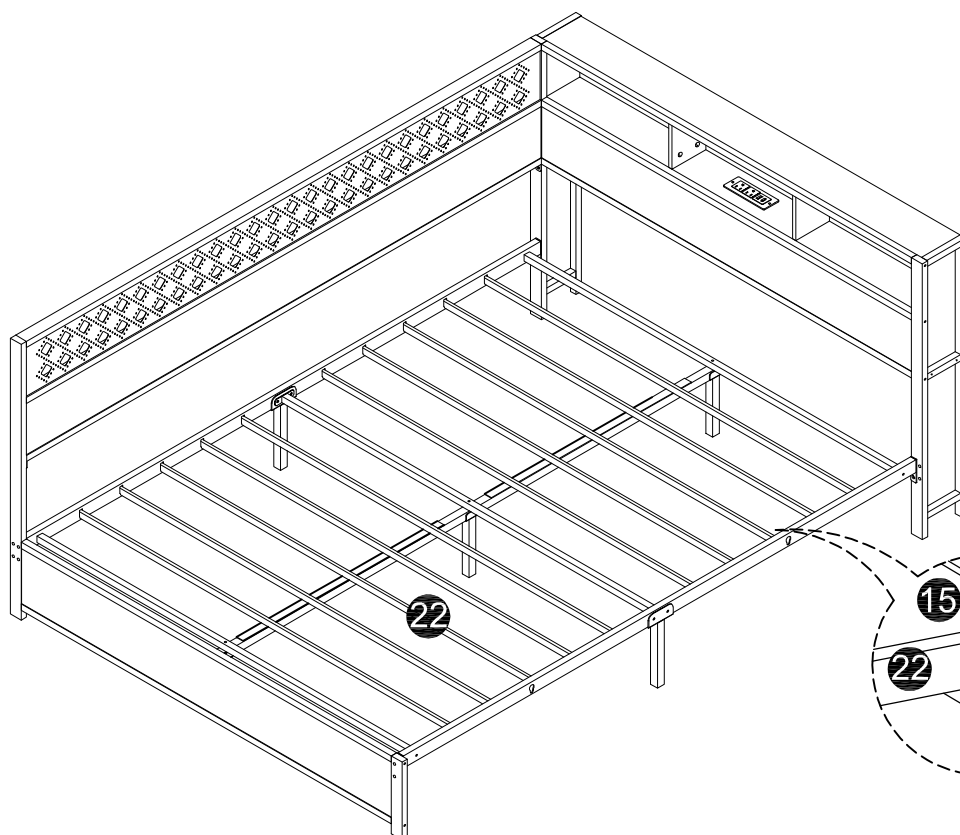


N  x20

Please insert both ends of part ②② into the slots as shown in the figure and then fit "N" into the gap.


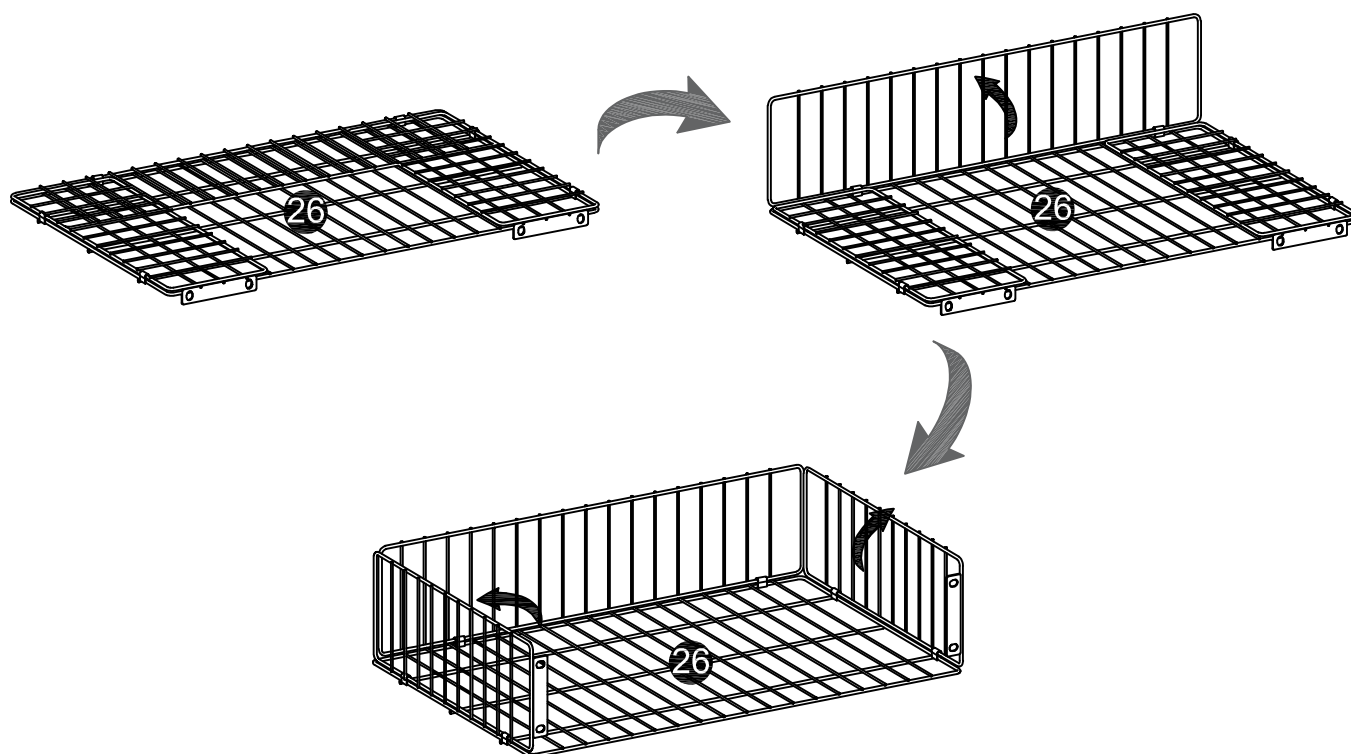


x2

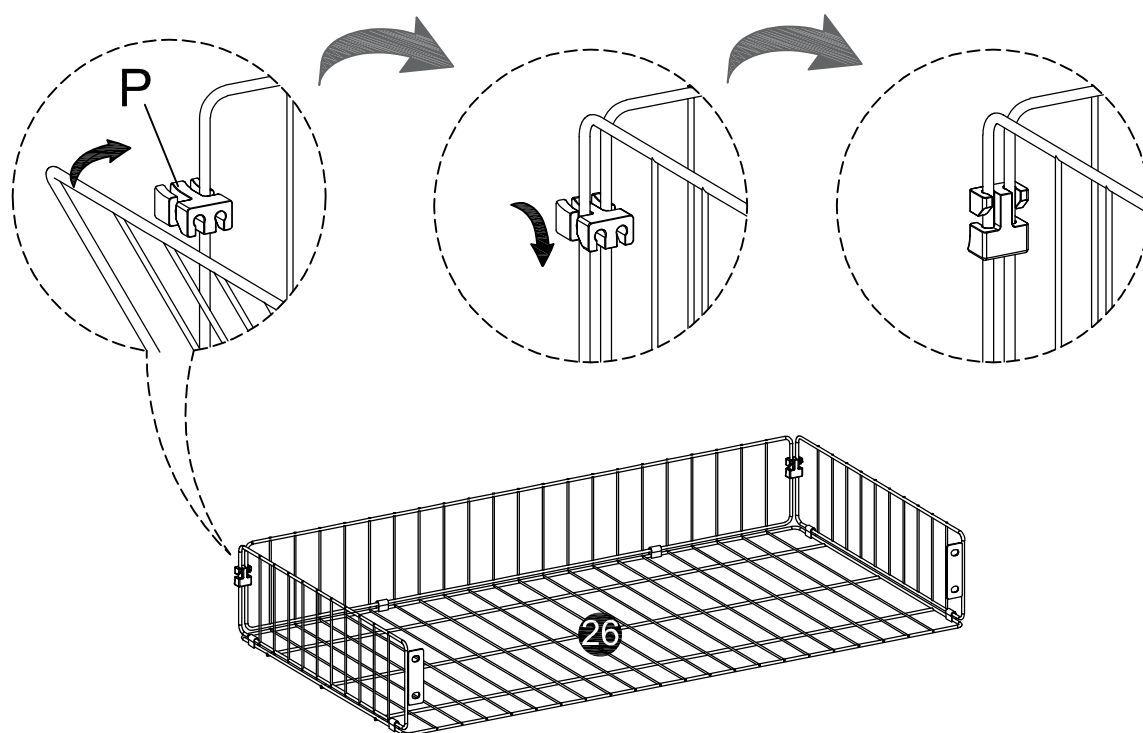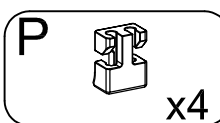



x2

21

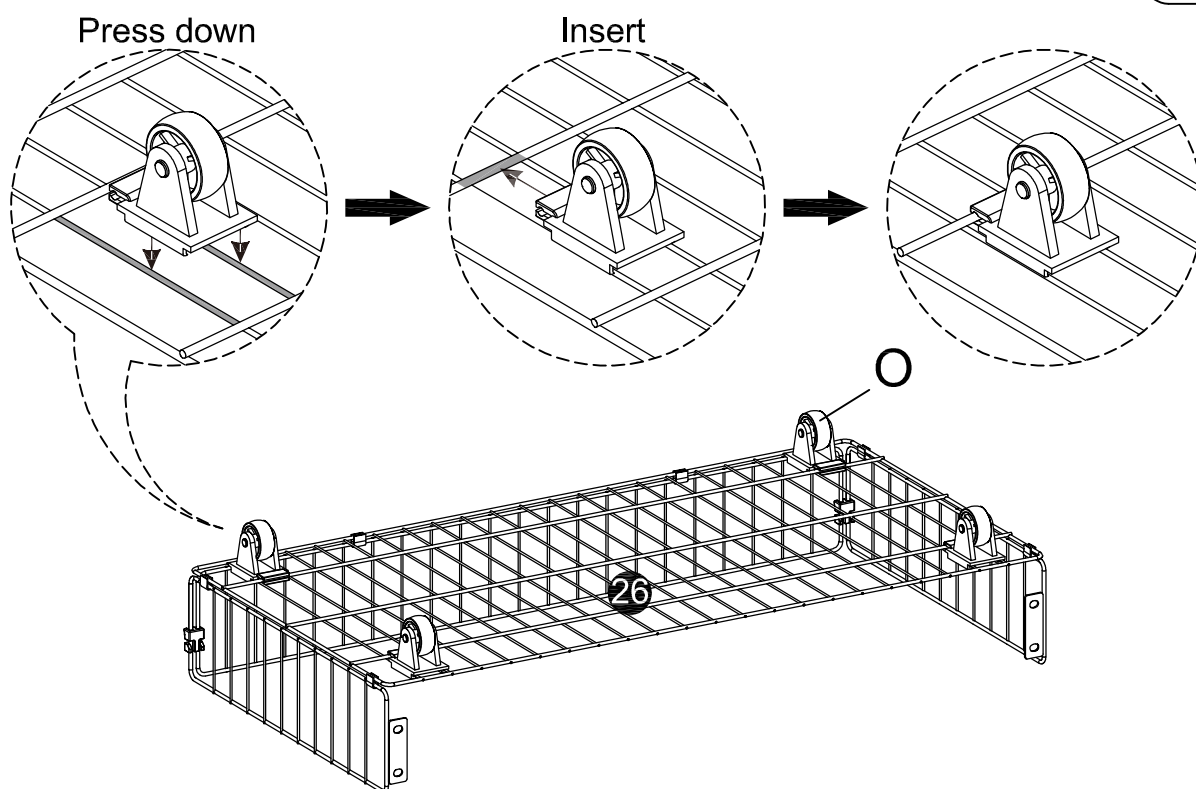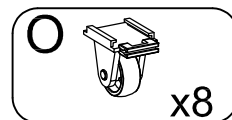




x2

22

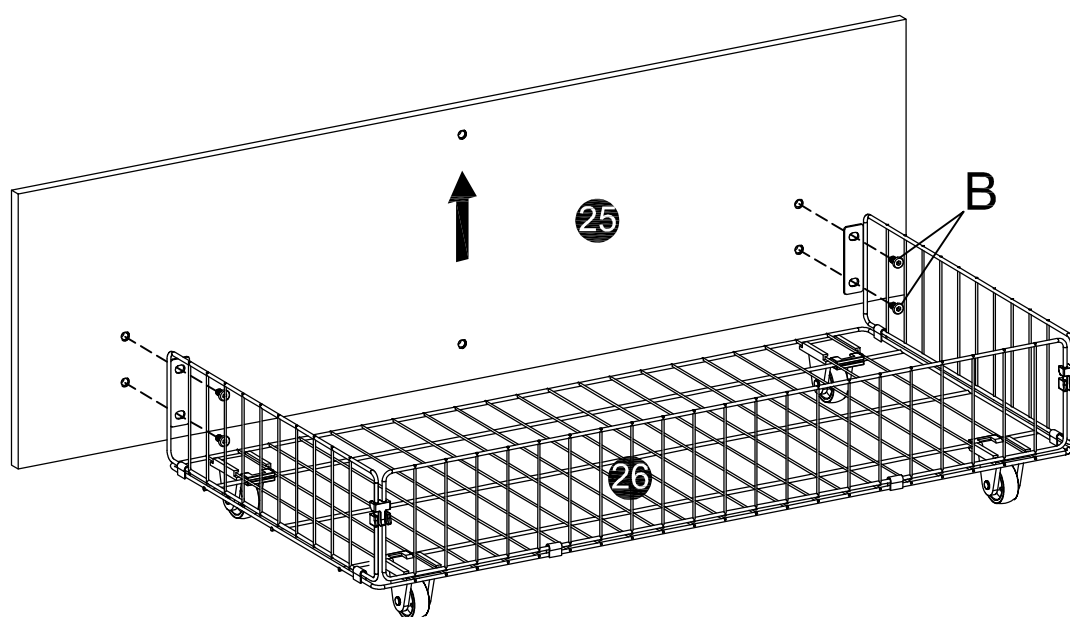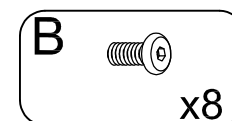



x2

23

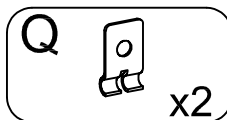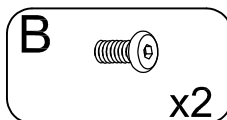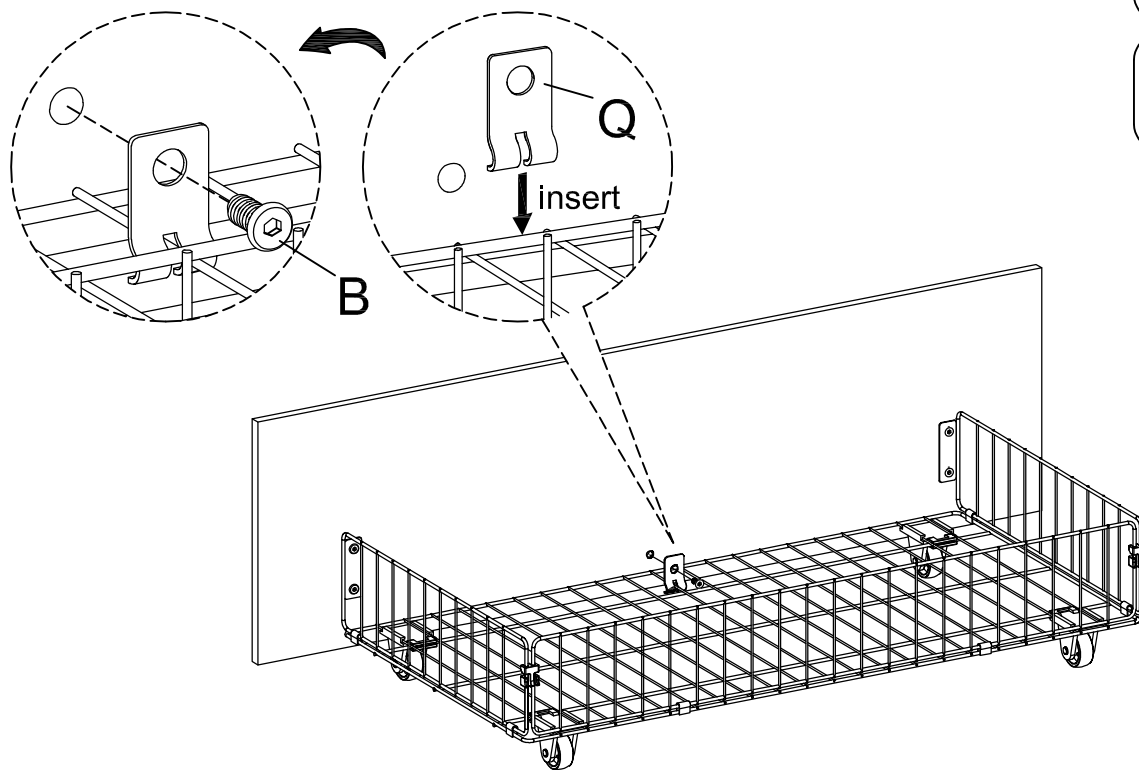


x2


24

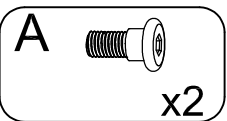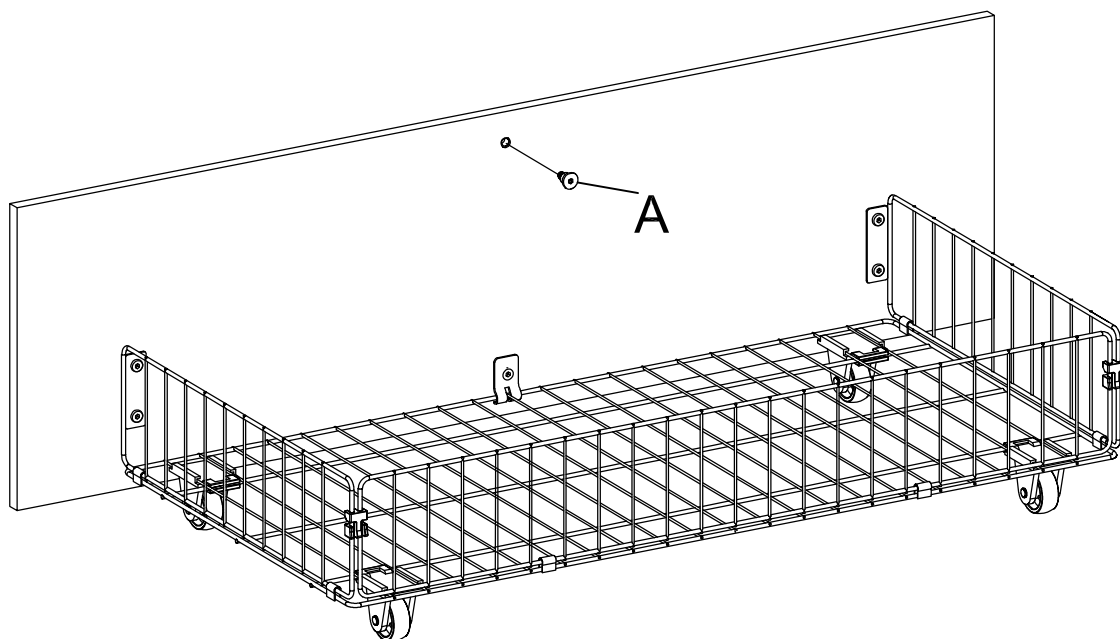

x2

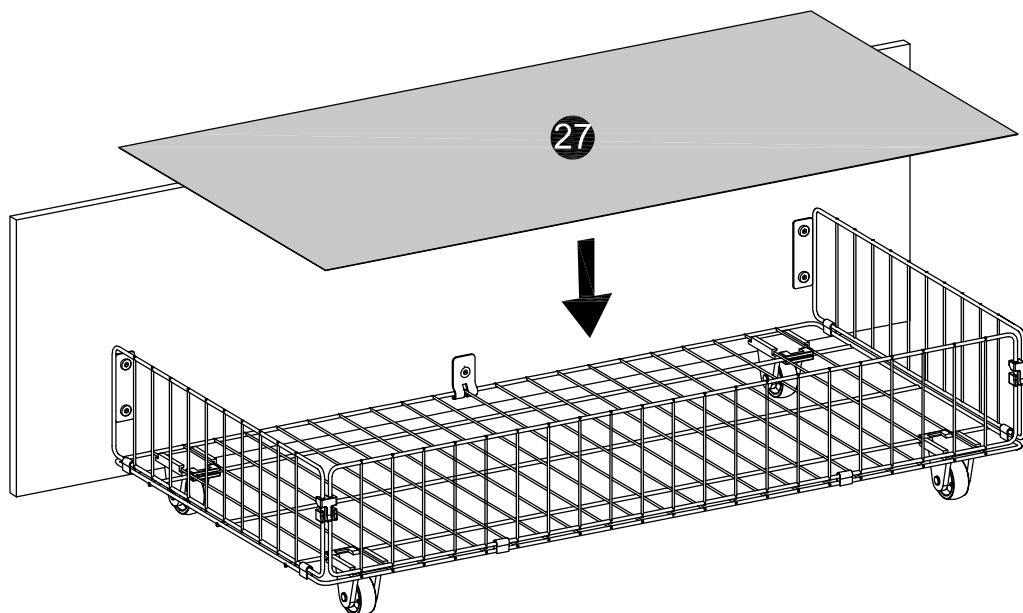

x2

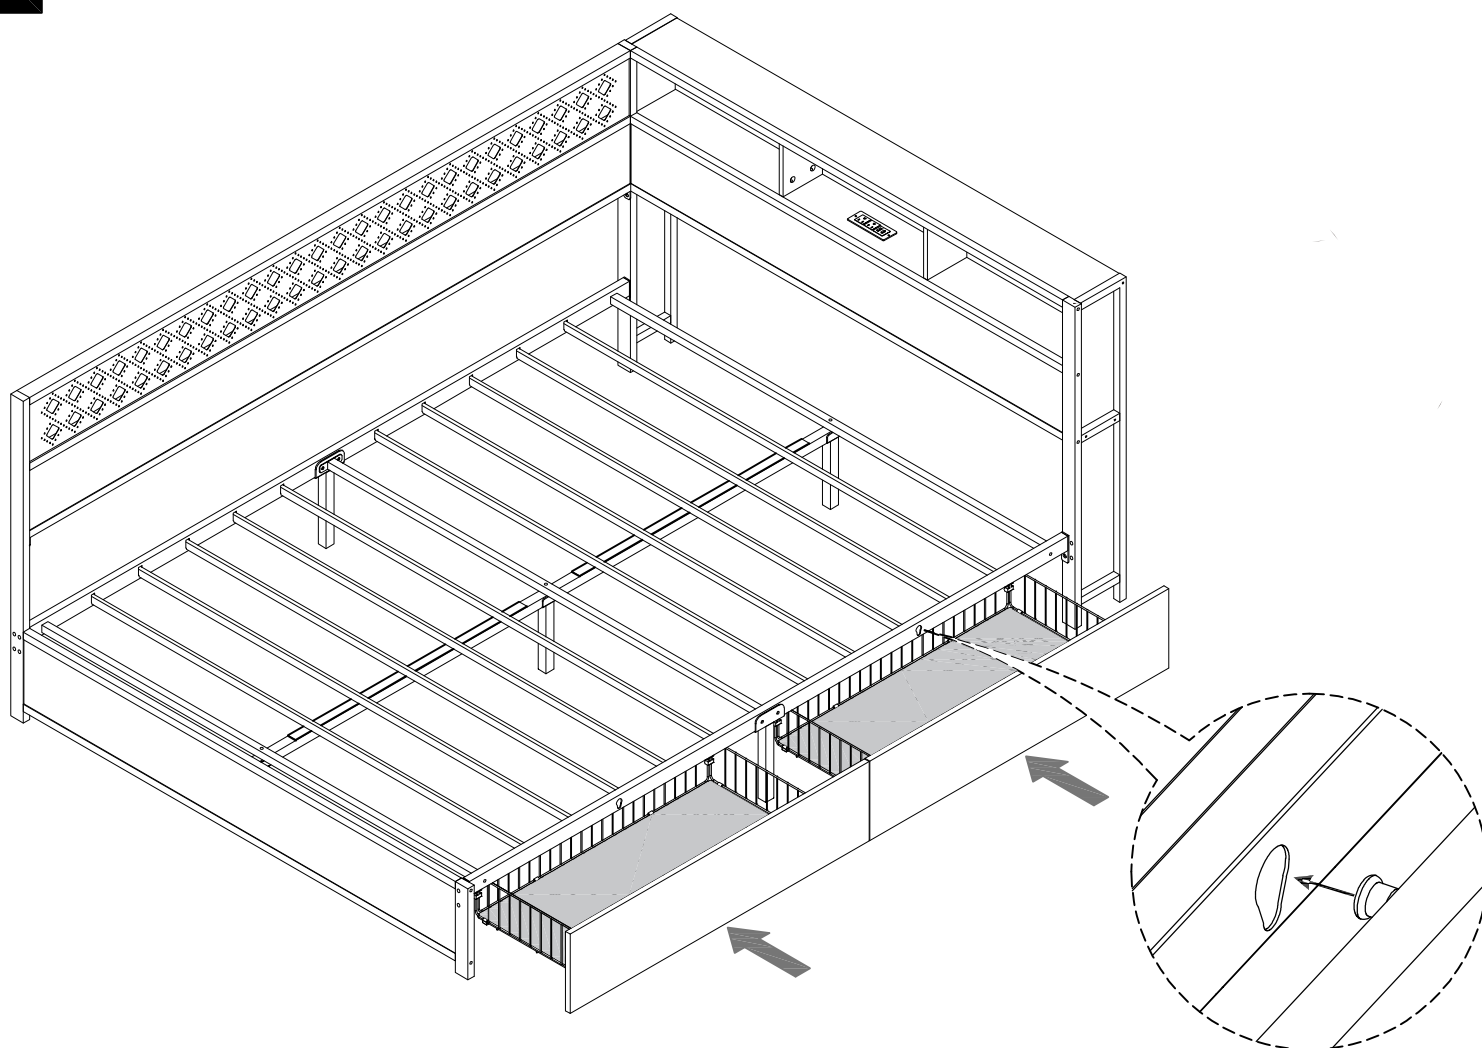

Put the (A) screws into the whole and press it into the bottom of the “” hole.